

Super Combo T-REX 700E INSTRUCTION MANUAL 使用說明書 KX018E06T

ALIGN

F3C
Performance Redefined

Contents

1	INTRODUCTION 前言
1~2	SAFETY NOTES 安全注意事項
3	EQUIPMENT REQUIRED FOR ASSEMBLY 自備設備
3	PACKAGE ILLUSTRATION 包裝說明
4	SAFETY CHECK BEFORE FLYING 飛行前安全檢查
5~19	ASSEMBLY SECTION 組裝說明
20	EQUIPMENT INSTALLATION 各項設備配置圖
21	BATTERY INSTALLATION ILLUSTRATION 電池安裝示意圖
22	INSTALLATION FOR ESC AND BEC 無刷調速器與BEC安裝
22	CANOPY ASSEMBLY 機頭罩安裝
23	ELECTRIC EQUIPMENT ILLUSTRATION 電子設備建議配置圖示
24	SERVO SETTING AND ADJUSTMENT 伺服器設定調整
24	ADJUSTMENTS FOR GYRO AND TAIL NEUTRAL SETTING 陀螺儀與尾翼中立點調整
25	PITCH AND THROTTLE SETTING 主旋翼螺距與油門設定
26	6A EXTERNAL BEC INSTRUCTION MANUAL 6A外接式BEC使用說明
27	RCM-BL700MX 470KV POWER COLLOCATION REFERENCE 原裝動力數據參考表
27~30	FLIGHT ADJUSTMENT AND SETTING 飛行動作調整與設定



Thank you for buying ALIGN products. The **T-REX 700E F3C** is the latest technology in Rotary RC models. Please read this manual carefully before assembling and flying the new **T-REX 700E F3C** helicopter. We recommend that you keep this manual for future reference regarding tuning and maintenance.

承蒙閣下選用亞拓遙控世界系列產品，謹表謝意。進入遙控世界之前必須告訴您許多相關的知識與注意事項，以確保您能夠在學習的過程中較得心應手。在開始操作之前，請務必詳閱本說明書，相信一定能夠給您帶來相當大的幫助，也請您妥善保管這本說明書，以作為日後參考。

Thank you for buying ALIGN Products. The T-REX 700E F3C Helicopter is designed as an easy to use, full featured Helicopter R/C model capable of all forms of rotary flight. Please read the manual carefully before assembling the model, and follow all precautions and recommendations located within the manual. Be sure to retain the manual for future reference, routine maintenance, and tuning.

The T-REX 700E F3C is a new product developed by ALIGN. It provides flying stability for beginners, full aerobatic capability for advanced fliers, and unsurpassed reliability for customer support.

感謝您選購亞拓產品。為了讓您容易方便的使用 T-REX 700E F3C 直昇機，請您詳細的閱讀完這本說明書之後再進行組裝以及操作這台直昇機。同時請您妥善的保存這本說明書，作為日後進行調整以及維修的參考。

T-REX 700E F3C 是由亞拓自行研發的新產品，不論您是需求飛行穩定性的初學者或是追求性能的飛行愛好者，T-REX 700E F3C 將是您最佳的選擇。

WARNING LABEL LEGEND 標誌代表涵義

 WARNING 警告	Mishandling due to failure to follow these instructions may result in damage or injury. 因為疏忽這些操作說明，而使用錯誤可能造成財產損失或嚴重傷害。
 CAUTION 注意	Mishandling due to failure to follow these instructions may result in danger. 因為疏忽這些操作說明，而使用錯誤可能造成危險。
 FORBIDDEN 禁止	Do not attempt under any circumstances. 在任何禁止的環境下，請勿嘗試操作。

IMPORTANT NOTES 重要聲明

R/C helicopters, including the T-REX 700E F3C are not toys. R/C helicopter utilize various high-tech products and technologies to provide superior performance. Improper use of this product can result in serious injury or even death. Please read this manual carefully before using and make sure to be conscious of your own personal safety and the safety of others and your environment when operating all ALIGN products.

Manufacturer and seller assume no liability for the operation or the use of this product. Intended for use only by adults with experience flying remote control helicopters at a legal flying field. After the sale of this product we cannot maintain any control over its operation or usage.

 
T-REX 700E F3C 遙控直昇機並非玩具，它是結合了許多高科技產品所設計出來的休閒用品，所以商品的使用不當或不熟悉都可能會造成嚴重傷害甚至死亡，使用之前請務必詳讀本說明書，勿輕忽並注意自身安全。

注意：任何遙控直昇機的使用，製造商和經銷商是無法對使用者於零件使用的損耗異常或組裝不當所發生之意外負任何責任，本產品是提供給有操作過模型直昇機經驗的成人，或有相當技術的人員在旁指導於當地合法遙控飛行場飛行，以確保安全無虞下操作使用，產品售出後本公司將不負任何操作和使用控制上的任何性能與安全責任。

We recommend that you obtain the assistance of an experienced pilot before attempting to fly our products for the first time. A local expert is the best way to properly assemble, setup, and fly your model for the first time. The Helicopter requires a certain degree of skill to operate, and is a consumer item. Any damage or dissatisfaction as a result of accidents or modifications are not covered by any warranty and cannot be returned for repair or replacement. Please contact our distributors for free technical consultation and parts at discounted rates when you experience problems during operation or maintenance.

模型商品屬於需專業技術且為消耗性之商品，如經拆裝使用後，會造成不等情況零件損耗，任何使用情況所造成商品不良或不滿意，將無法於保固條件內更換新品或退貨，如遇有使用操作維修問題，本公司全省分公司或代理商將提供技術指導、特價零件供應服務。

2. SAFETY NOTES 安全注意事項



Fly only in safe areas, away from other people. Do not operate R/C aircraft within the vicinity of homes or crowds of people. R/C aircraft are prone to accidents, failures, and crashes due to a variety of reasons including, lack of maintenance, pilot error, and radio interference. Pilots are responsible for their actions and damage or injury occurring during the operation or as a result of R/C aircraft models.

遙控模型飛機、直昇機屬高危險性商品，飛行時務必遠離人群，人為組裝不當或機件損壞、電子控制設備不良，以及操控上的不熟悉，都有可能導致飛行失控損傷等不可預期的意外，請飛行者務必注意飛行安全，並需了解自負疏忽所造成任何意外之責任。

**LOCATE AN APPROPRIATE LOCATION 遠離障礙物及人群**

R/C helicopters fly at high speed, thus posing a certain degree of potential danger. Choose an a legal flying field consisting of flat, smooth ground without obstacles. Do not fly near buildings, high voltage cables, or trees to ensure the safety of yourself, others and your model. For the first practice, please choose a legal flying field and can use a training skid to fly for reducing the damage. Do not fly your model in inclement weather, such as rain, wind, snow or darkness.

直昇機飛行時具有一定的速度，相對的也潛在著危險性，場地的選擇也相對的重要，請需遵守當地法規到合法遙控飛行場地飛行。必須注意周遭有沒有人、高樓、建築物、高壓電線、樹木等等，避免操控的不當造成自己與他人財產的損壞。初次練習時，務必選擇在空曠合法專屬飛行場地並適當搭配練習架練習飛行，這對飛行失誤所造成的損傷將會大幅的降低。請勿在下雨、打雷等惡劣天候下操作，以確保本身及機體的安全。

**PREVENT MOISTURE 遠離潮濕環境**

R/C models are composed of many precision electrical components.

It is critical to keep the model and associated equipment away from moisture and other contaminants. The introduction or exposure to water or moisture in any form can cause the model to malfunction resulting in loss of use, or a crash. Do not operate or expose to rain or moisture.

直昇機內部也是由許多精密的電子零組件組成，所以必須絕對的防止潮濕或水氣，避免在浴室或雨天時使用，防止水氣進入機身內部而導致機件及電子零件故障而引發不可預期的意外！

**PROPER OPERATION 勿不當使用本產品**

Please use the replacement of parts on the manual to ensure the safety of instructors. This product is for R/C model, so do not use for other purpose.

請勿自行改造加工，任何的升級改裝或維修，請使用亞拓產品目錄中的零件，以確保結構的安全。請確認於產品限內操作，請勿過載使用，並勿用於安全、法令外其它非法用途。

**OBTAIN THE ASSISTANCE OF AN EXPERIENCED PILOT 避免獨自操控**

Before turning on your model and transmitter, check to make sure no one else is operating on the same frequency. Frequency interference can cause your model, or other models to crash. The guidance provided by an experienced pilot will be invaluable for the assembly, tuning, trimming, and actual first flight. (Recommend you to practice with computer-based flight simulator.)

至飛行場飛行前，需確認是否有相同頻率的同好正進行飛行，因為開啓相同頻率的發射機將導致自己與他人立即墜等意外危險。遙控飛機操控技巧在學習初期有著一定的難度，要盡量避免獨自操作飛行，需有經驗的人士在旁指導，才可以操控飛行。
(動線電腦模擬器及老手指導是入門必要的選擇)

**SAFE OPERATION 安全操作**

 
Operate this unit within your ability. Do not fly under tired condition and improper operation may cause in danger.

請於自己能力內及需要一定技術範圍內操作這台直昇機，過於疲勞、精神不佳或不當操作，意外發生風險將可能會提高。

**ALWAYS BE AWARE OF THE ROTATING BLADES 遠離運轉中零件**

During the operation of the helicopter, the main rotor and tail rotor will be spinning at a high rate of speed. The blades are capable of inflicting serious bodily injury and damage to the environment. Be conscious of your actions, and careful to keep your face, eyes, hands, and loose clothing away from the blades. Always fly the model a safe distance from yourself and others, as well as surrounding objects. Never take your eyes off the model or leave it unattended while it is turned on. Immediately turn off the model and transmitter when you have landed the model.

當直昇機主旋翼與尾旋翼運轉時，切勿觸摸並遠離任何物件，以避免造成危險及損壞。

**KEEP AWAY FROM HEAT 遠離熱源**

R/C models are made of various forms of plastic. Plastic is very susceptible to damage or deformation due to extreme heat and cold climate. Make sure not to store the model near any source of heat such as an oven, or heater. It is best to store the model indoors, in a climate-controlled, room temperature environment.

遙控飛機多半是以 PA 纖維或聚乙稀、電子商品為主要材質，因此要盡量遠離熱源、日曬，以避免因高溫而變形甚至熔毀損壞的可能。




RADIO TRANSMITTER AND ELECTRONIC EQUIPMENT REQUIRED FOR ASSEMBLY 自備遙控及電子設備

 Transmitter (7-channel or more, helicopter system) 發射機(七個以上通道飛機模式遙控器)	 Receiver(7-channel or more) 接收機(七個以上)	 LiPo Battery Charger Li-Po電池充電器
 22.2V 6S 4500~5200mAh Li-Po Battery x 2pc 22.2V/6S 4500~5200mAh Li-Po電池 x 2	 Receiver battery 7.4V 2S 1900~2300mAh Li-Po x 1pc 接收機電池7.4V/2S 1900~2300mAh Li-Po x 1	 Dial Pitch Gauge x 1pc 旋轉式螺距規 x 1

ADDITIONAL TOOLS REQUIRED FOR ASSEMBLY 自備工具

 Scissors 剪刀	 Cutter Knife 刀子	 Diagonal Cutting Pliers 斜口鉗	 Needle Nose Pliers 尖嘴鉗
 Oil 潤滑油	 CA 瞬時膠	 AB Glue AB膠	 Hexagon Screw Driver 六角螺絲起子 3mm/2.5mm/2mm/1.5mm
			 Philips Screw Driver 十字螺絲起子 φ3.0/φ1.8mm

4.PACKAGE ILLUSTRATION 包裝說明

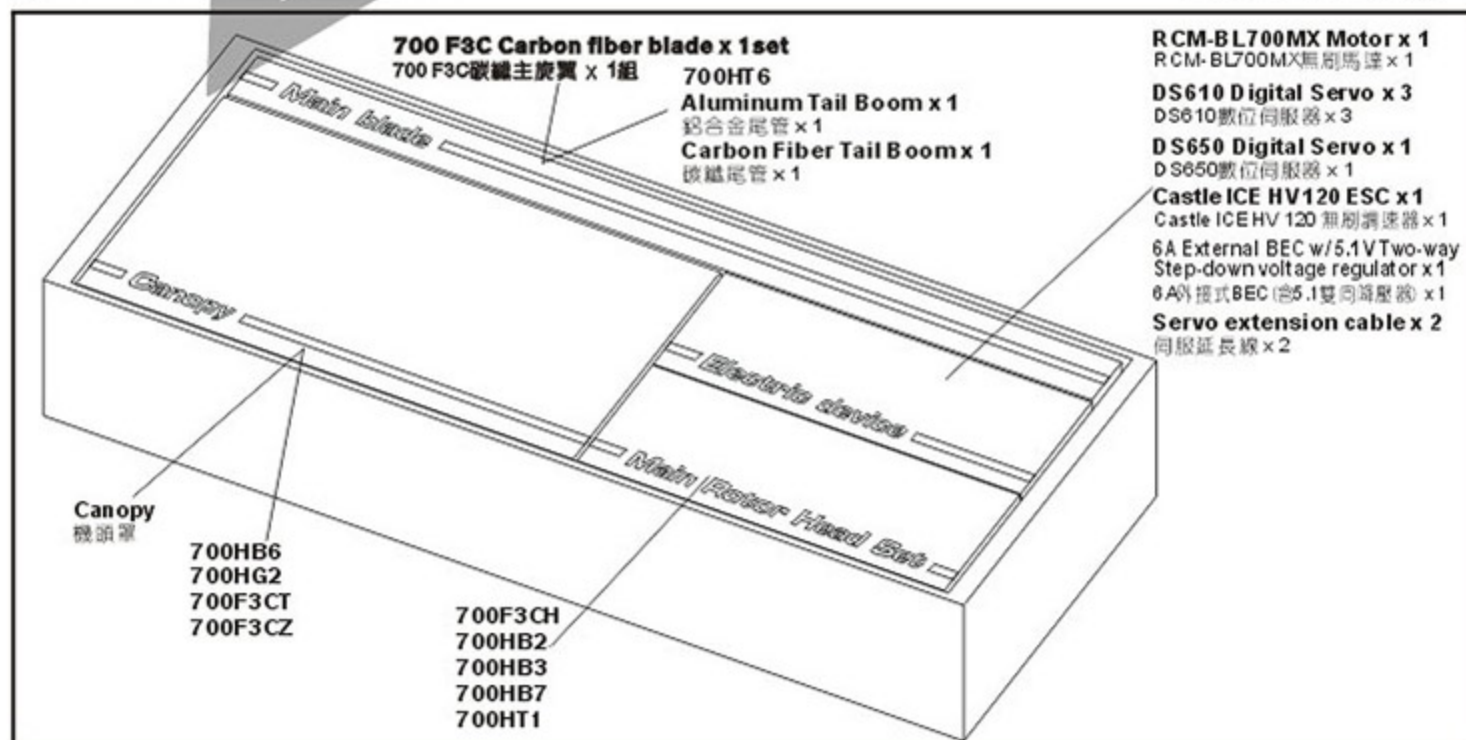

CAREFULLY INSPECT BEFORE REAL FLIGHT 請嚴格執行飛行前之檢查義務

- ☆ Before flying, please check to make sure no one else is operating on the same frequency for the safety.
 - ☆ Before flight, please check if the batteries of transmitter and receiver are enough for the flight.
 - ☆ Before turn on the transmitter, please check if the throttle stick is in the lowest position. IDLE switch is OFF.
 - ☆ When turn off the unit, please follow the power on/off procedure. Power ON- Please turn on the transmitter first, and then turn on receiver. Power OFF- Please turn off the receiver first and then turn off the transmitter. Improper procedure may cause out of control, so please to have this correct habit.
 - ☆ Before operation, check every movement is smooth and directions are correct. Carefully inspect servos for interference and broken gear.
 - ☆ Check for missing or loose screws and nuts. See if there is any cracked and incomplete assembly of parts. Carefully check main rotor blades and rotor holders. Broken and premature failures of parts possibly cause resulting in a dangerous situation.
 - ☆ Check all ball links to avoid excess play and replace as needed. Failure to do so will result in poor flight stability.
 - ☆ Check if the battery and power plug are fastened. Vibration and violent flight may cause the plug loose and result out of control.
 - ☆ Be sure to use the carbon fiber main rotor blades durable with 2800RPM (or faster) 700mm length. Please do not use the carbon fiber main rotor blades with durability lower than 2800RPM and wooden or glass fiber main blades to avoid any unpredictable damage.
- ★ 每次飛行前應先確認所使用的頻率是否會干擾他人，以確保你自身與他人的安全。
- ★ 每次飛行前請確認你發射機與接收機電池的電量是在足夠飛行的狀態。
- ★ 開機前請確認油門搖桿是否位於最低點，熄火降落開關，定速開關(IDLE)是否於關閉位置。
- ★ 開機時必須遵守電源開關機的程序，開機時應先開發射機後，再開接收機電源；關機時應先關閉接收機後，再關閉發射機電源。不正確的開關程序可能會造成失控的現象，影響自身與他人的安全，請養成正確的習慣。
- ★ 開機時請先確定各機動是否順暢，及方向是否正確，並檢查伺服器動作是否有干涉或崩齒的情形，使用故障的伺服器將導致不可預期的危險。
- ★ 飛行前請確認沒有缺少或鬆脫的螺絲與螺帽，確認沒有組裝不完整或損壞的零件，仔細檢查主旋翼是否有損壞，特別是接近主旋翼夾座的部位，損壞或組裝不完整的零件不僅影響飛行，更會造成不可預期的危險。注意：每次飛行前的安全檢查、保養、及更換損耗零件，請確實嚴格執行以確保安全。
- ★ 檢查所有的連桿頭是否有鬆脫的情形，過鬆的連桿頭應先更新，否則將造成直昇機無法操控的危險。
- ★ 確認電池及電源接頭是否固定牢靠，飛行中的震動或激烈的飛行，可能造成電源接頭鬆脫而造成失控的危險。
- ★ 主旋翼務必使用耐轉速2800RPM以上的700mm長度碳纖維，嚴禁使用耐轉速低於2800RPM的碳纖維、玻璃纖維或木質。

Standard Equipment 標準配備

 700HC2	 700F3CH	 700HB1	 700HB2	 700HB3
 700HB6	 700HB7 CNC Slant Thread Main Drive Gear	 700HG2	 700F3CT	 700HT1
 700HT6	 700F3CZ	 700 F3C Carbon Fiber Blades: 1 set 700 F3C 碳纖維主旋翼: 1組	 RCM-817H MX 470 1V8 Brushless motor: 1 RCM-817H MX 470 1V8 無刷馬達: 1	 Motor Slant Thread Pinion Gear: 12T x 1 馬達斜齒輪: 12T x 1
 DSC 10 Digital Servo x 3 DSC 10 數位伺服器 x 3 CNC Metal servo horn CNC金屬伺服器舵角片 x 3	 GR11 Hard Lock Gyro Combo: 1 GR11 鎖定位陀螺儀組合: 1	 Castle ICE HV 120 ESC x 1 Castle ICE HV 120 無刷電調: 1	 AEt 601 8EC w/ 5.1V Two-way Step-down voltage regulator (AEt) 8EC (5.1V 雙向降壓器)	

When you see the marks as below, please use glue or grease to ensure flying safety.


標有以下符號之組裝步驟，請配合上膠或上油，以確保使用之可靠度。

- CA: Apply CA Glue to fix.
AB: Apply AB Glue to fix.
R48: Apply Anaerobics Retainer to fix.
T43: Apply Thread Lock to fix.
OIL: Add Grease.

- CA: 使用瞬間膠固定
AB: 使用AB膠固定
R48: 使用金屬管狀固定厌氧膠固定
T43: 使用螺絲膠
OIL: 添加潤滑油

When assembling ball links, make sure the "A" character faces outside.


各項塑膠連桿扣接時，A字請朝外。

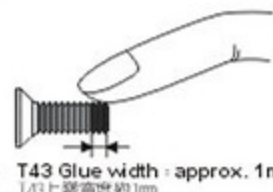Grease
潤滑油R48
綠色T43
藍色CA
Self-cured (自乾)AB
Self-cured (自乾)T43 Glue width: approx. 1mm
T43上膠寬度約1mm

R48 metal tubular adhesive (eg. Bearings). T43 thread lock, apply a small amount on screws or metal parts and wipe surplus off. When disassembling, recommend to heat the metal joint about 15 Seconds. (NOTE: Keep plastic parts away from heat.)

R48 為強力金屬管狀(如軸承)接著劑，T43為螺絲膠，膠合螺絲或金屬內外徑請務必少量使用，必要時請用手去抹多餘膠量，欲拆卸時可於金屬接合部位熱烤約15秒。(注意！塑膠件避免接近熱源)


700NH1A

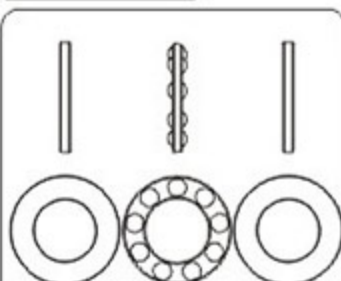Thrust bearing
止推軸承 (10.2 x 18x5.5mm) x 2Bearing
軸承 (10 x 15x5mm) x 2Spindle bearing spacer
橫軸止推墊圈 (10 x 16x1mm) x 2Linkage ball A (M4x5)
連桿球 A (M4x5) (5x24mm) x 2


700NH1

Bearing
軸承 (10 x 19x5mm) x 2

Apply a little amount of T43 thread lock when fixing a metal part.
裝件時對金屬件預塗用適量T43 (鎖固膠)

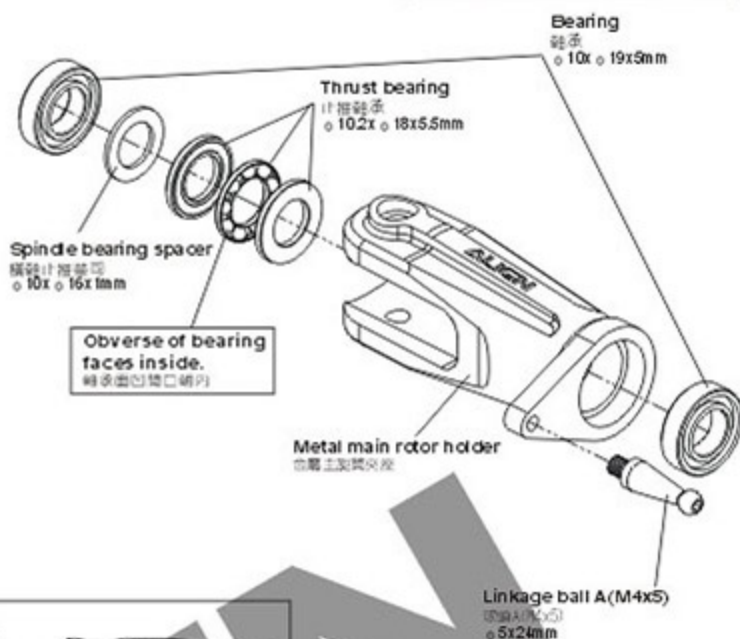

Apply grease on thrust bearing.
止推軸承塗上潤滑油

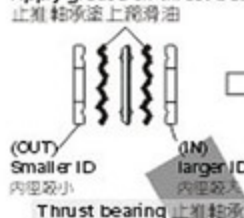Thrust bearing
止推軸承Metal main rotor holder
金屬主旋翼夾座


Already assembled by Factory.
Before flying, please check if
the screws are fixed with glue.

原廠組裝完成品，每一次飛行前請先確認螺絲是否已上膠不會鬆動。



700NH1A

Spindle bearing spacer
橫軸止推墊圈 (10 x 16x1mm) x 2

700HH2



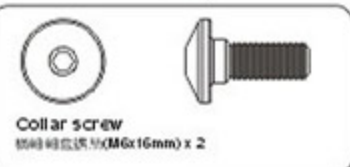
Collar screw
橫軸止推螺絲 (M6x16mm) x 2

700HH2A

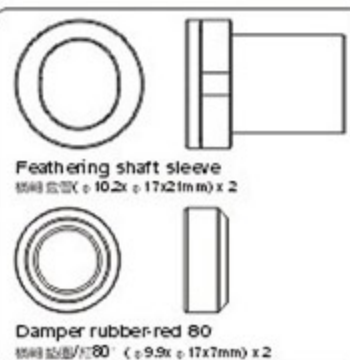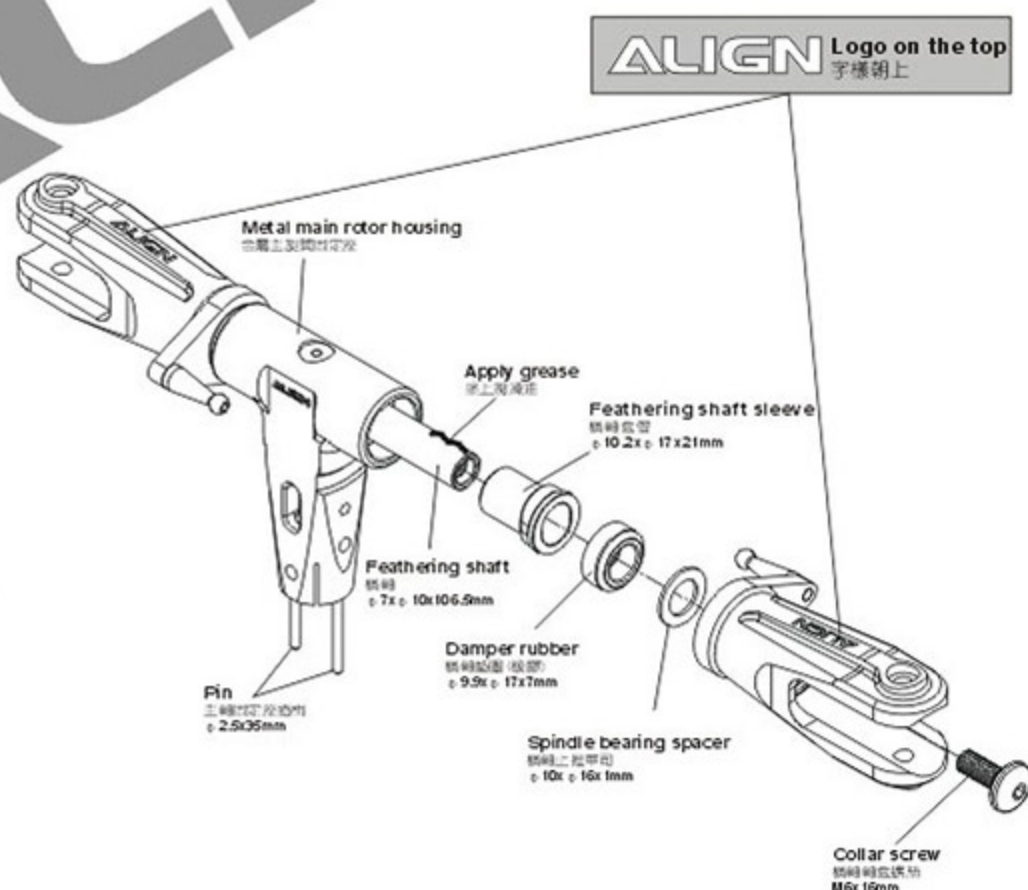Feathering shaft sleeve
橫軸套 (10.2 x 17x21mm) x 2Damper rubber-red 80
橫軸減阻/紅80 (9.9 x 17x7mm) x 2

ALIGN Logo on the top
字樣朝上

700HH2

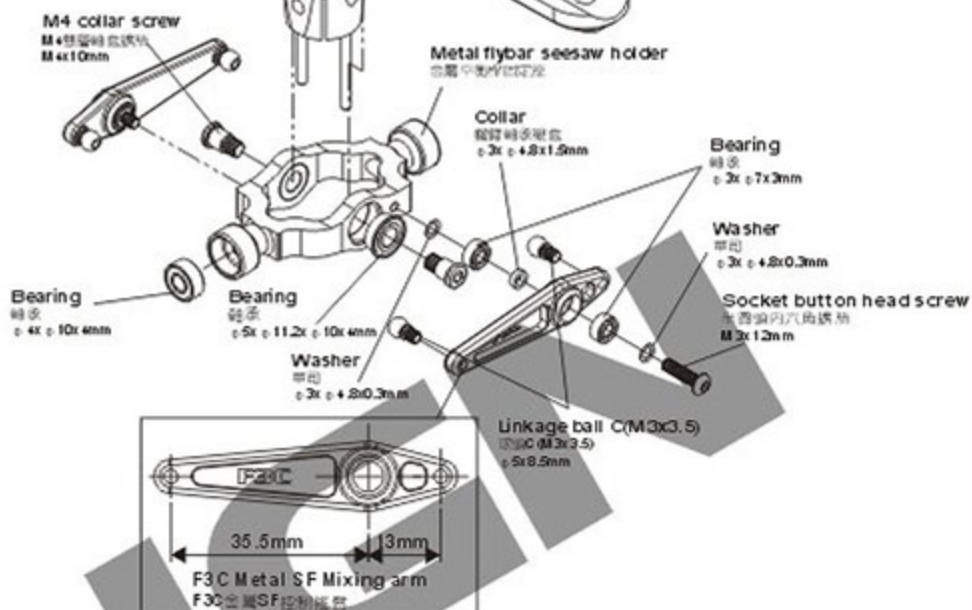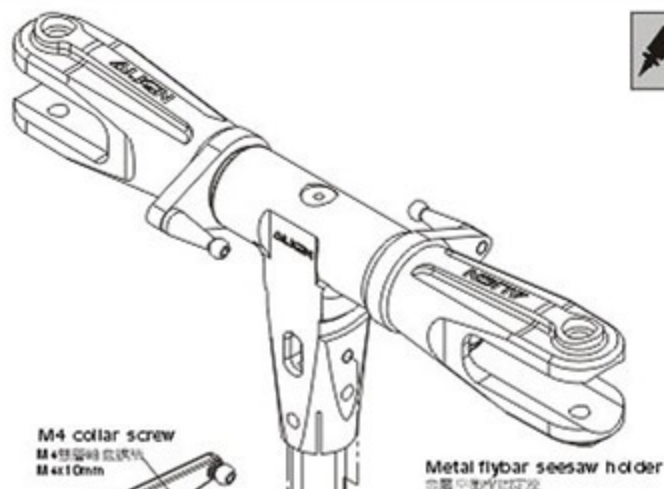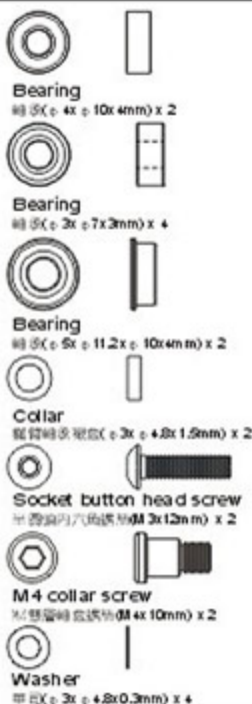


700HH2A



700HH3



700HH3A

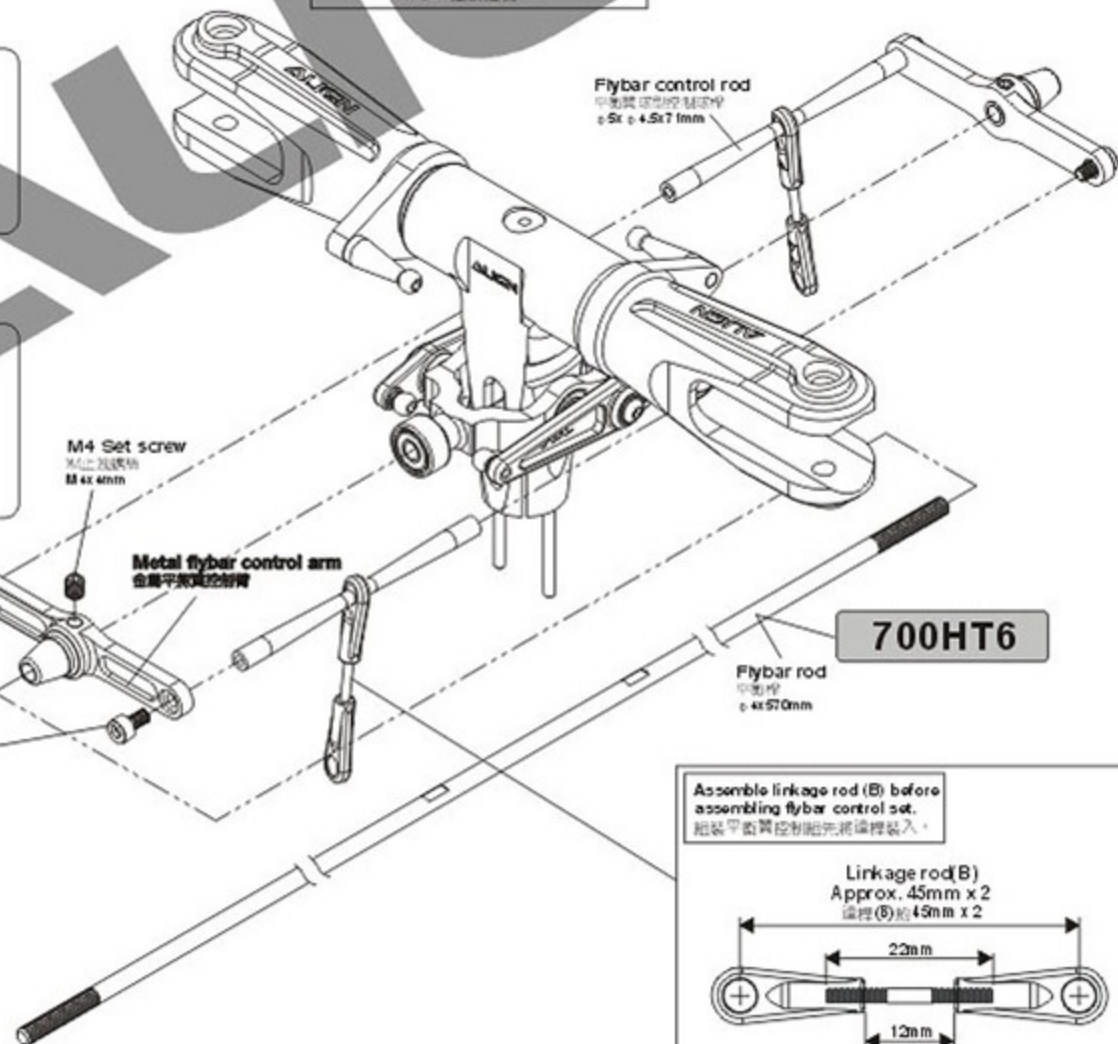

700HH4



Bearing

轴承 (ø 2x ø 7x 3mm) x 4



Bearing

轴承 (ø 2x ø 5x 2.3mm) x 4



Socket screw

圆头内六角螺钉 (M2x5mm) x 4



Socket button head screw

圆头内六角螺钉 (M3x12mm) x 2




Washer

垫圈 (ø 2x ø 4.8x 0.3mm) x 4



Collar

圆筒轴套 (ø 3x ø 4.8x 1.9mm) x 2

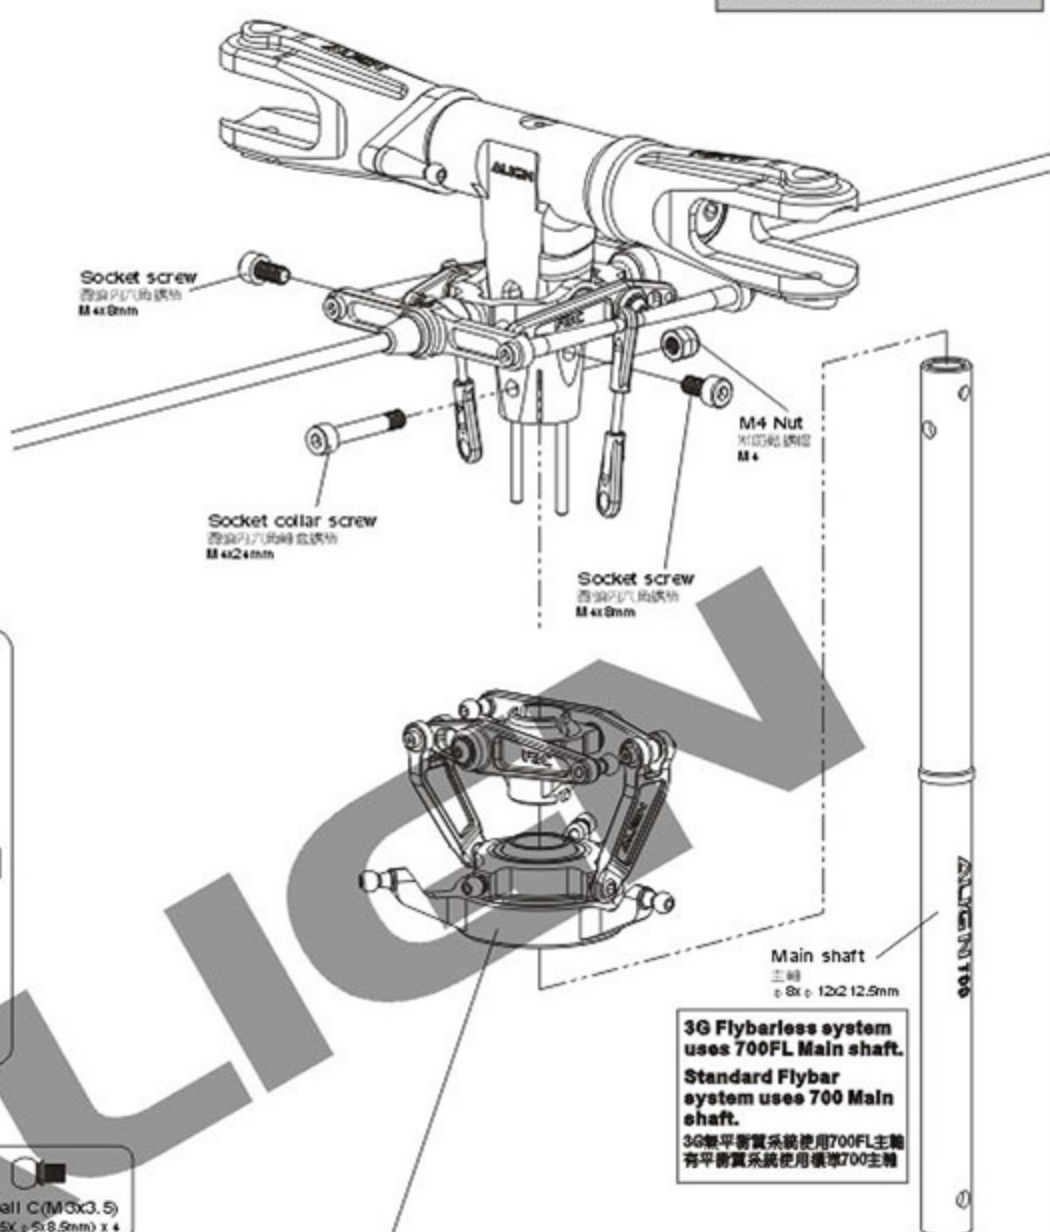

700NH4A



Linkage ball B (M3x4)

连杆球 B (M3x4) (ø 5x 12mm) x 2



Socket screw

圆头内六角螺钉 (M4x8mm) x 2



Socket collar screw

圆头内六角螺钉 (M4x24mm) x 1



M4 Nut

M4 圆帽螺母 x 1

700HH5A



Linkage ball B (M3x4)

连杆球 B (M3x4) (ø 5x 12mm) x 3



Linkage ball C (M3x3.5)

连杆球 C (M3x3.5) (ø 5x 8.5mm) x 4



Bearing

轴承 (ø 2x ø 5x 2.3mm)



Socket screw

圆头内六角螺钉
M2x5mm



Washer

垫圈 (ø 2x ø 4.8x 0.3mm)



Collar

圆筒轴套
ø 3x ø 4.8x 1.9mm



Metal washout base

金属清洗底座



Radius arm

半径臂



Radius arm

半径臂



Socket button head screw

圆头内六角螺钉
M3x12mm



Washer

垫圈
ø 2x ø 4.8x 0.3mm



Bearing

轴承
ø 2x ø 7x 3mm



Linkage ball B (M3x4)

连杆球 B (M3x4)
ø 5x 12mm



Linkage ball C (M3x3.5)

连杆球 C (M3x3.5)
ø 5x 8.5mm



Linkage ball B (M3x4)

连杆球 B (M3x4)
ø 5x 12mm



Linkage ball C (M3x3.5)

连杆球 C (M3x3.5)
ø 5x 8.5mm



Linkage ball B (M3x4)

连杆球 B (M3x4)
ø 5x 12mm



Linkage ball C (M3x3.5)

连杆球 C (M3x3.5)
ø 5x 8.5mm



Linkage ball B (M3x4)

连杆球 B (M3x4)
ø 5x 12mm



Linkage ball C (M3x3.5)

连杆球 C (M3x3.5)
ø 5x 8.5mm



Linkage ball B (M3x4)

连杆球 B (M3x4)
ø 5x 12mm



Linkage ball C (M3x3.5)

连杆球 C (M3x3.5)
ø 5x 8.5mm



Linkage ball B (M3x4)

连杆球 B (M3x4)
ø 5x 12mm



Linkage ball C (M3x3.5)

连杆球 C (M3x3.5)
ø 5x 8.5mm



Linkage ball B (M3x4)

连杆球 B (M3x4)
ø 5x 12mm




Linkage ball C (M3x3.5)

连杆球 C (M3x3.5)
ø 5x 8.5mm



Linkage ball B (M3x4)

连杆球 B (M3x4)
ø 5x 12mm

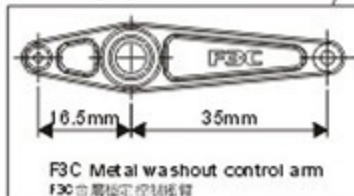

CAUTION

注意

Already assembled by Factory.
Before flying, please check if
the screws are fixed with glue.
已经由工厂组装，起飞前请检查
螺丝是否已用胶水固定。

700HH5

Carbon fiber flybar reinforcement tube 平衡桿碳纖維套組安裝



- 1: Mix thoroughly suitable amount of epoxy.
- 2: Apply generous amount of epoxy on the tips of carbon tube after sliding over the linkage rod. (Suggest to use the AB glue that hardened in 30 mins.)
(Note: for quick drying epoxy, work fast as it must be applied prior to curing)
- 3: Slide the flybar sleeves on both sides of the carbon tube.

- 1: 使用適量的AB膠，且均勻的攪拌混合。
- 2: 將碳纖維管套上AB膠，建議使用30分鐘硬化的AB膠。
- 3: 接著將平衡桿套分別套入碳纖維管端。



- 4: The base to base length is approx. 204mm.
- 4: 基距約為204mm

700H22

Linkage rod(A)
連桿(A) 約1.96x1mm x 2

Linkage rod(C)
連桿(C) 約1.96x56mm x 2

 
Apply a little amount of T43 thread lock when fixing a metal part.
鎖付螺絲時，合處件請使用適量T43 (鐵屑膠)

700H22A

Ball link
連桿球 約8


700HH2A

Socket screw
螺絲 螺絲規格(M3x10mm) x 1




- CAUTION 注意**
- Aluminum flybar sleeve (For nimble flight)
平衡桿鋁套 (靈活飛行特性使用)
(1g) x 4
 - Steel flybar sleeve (For stable flight)
平衡桿鋼套 (穩定飛行特性使用)
(5g) x 2

Aluminum or steel flybar sleeve (For stable flight) can be selected based on flight condition requirements.
可依不同飛行特性要求，選擇使用平衡桿鋁套或平衡桿鋼套(動作更穩定)。

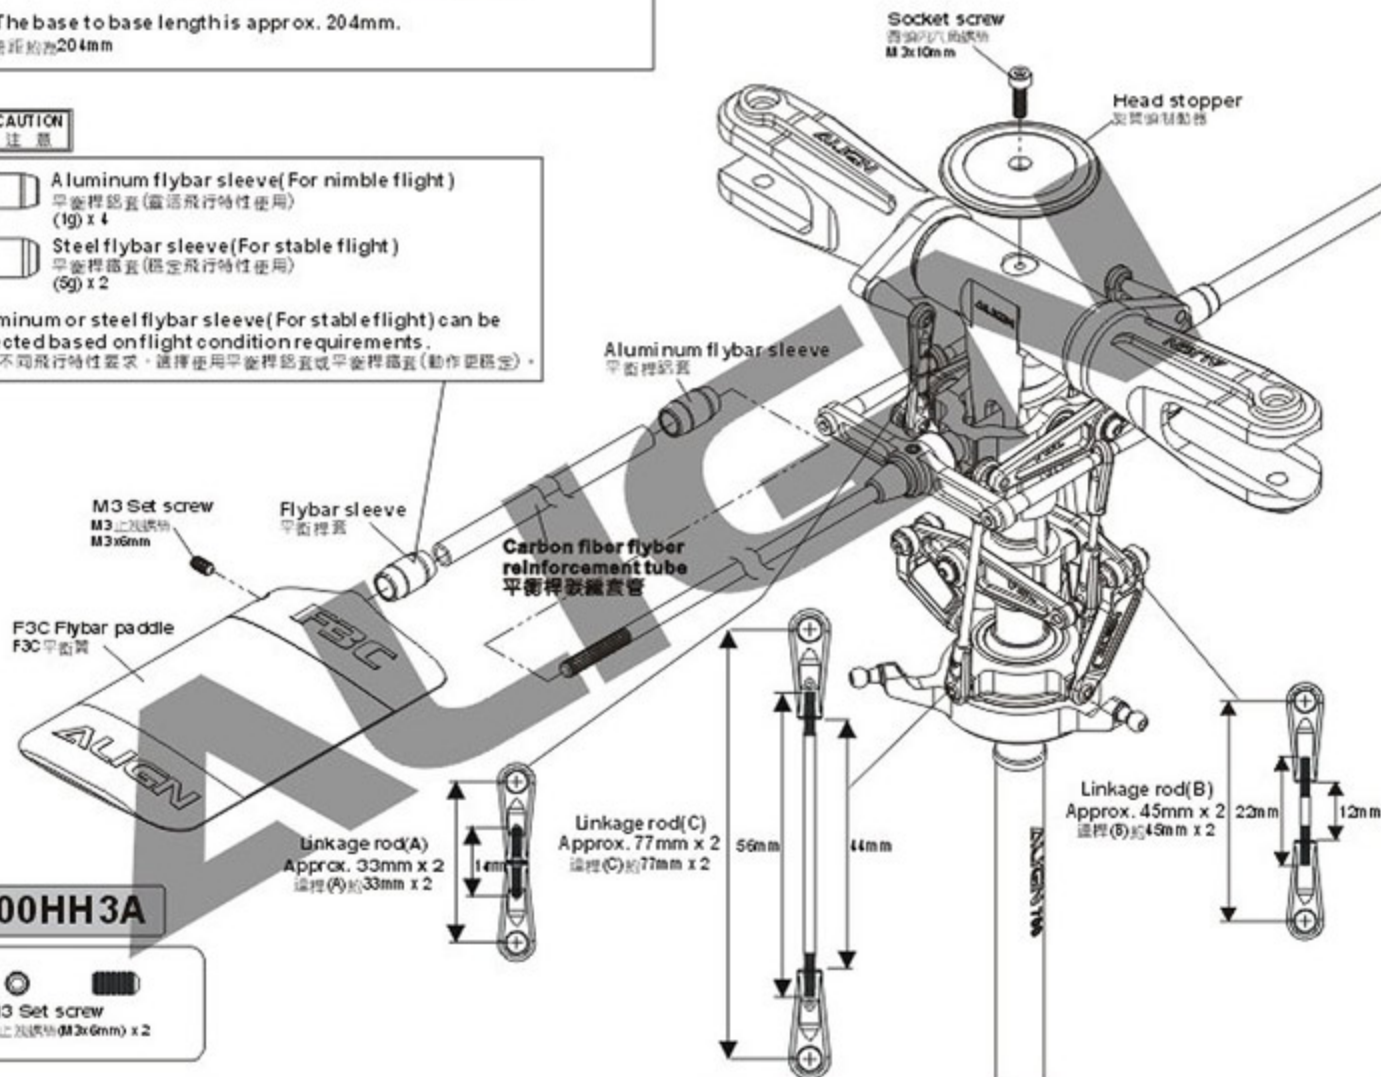

700HH3A

M3 Set screw
螺絲規格(M3x6mm) x 2

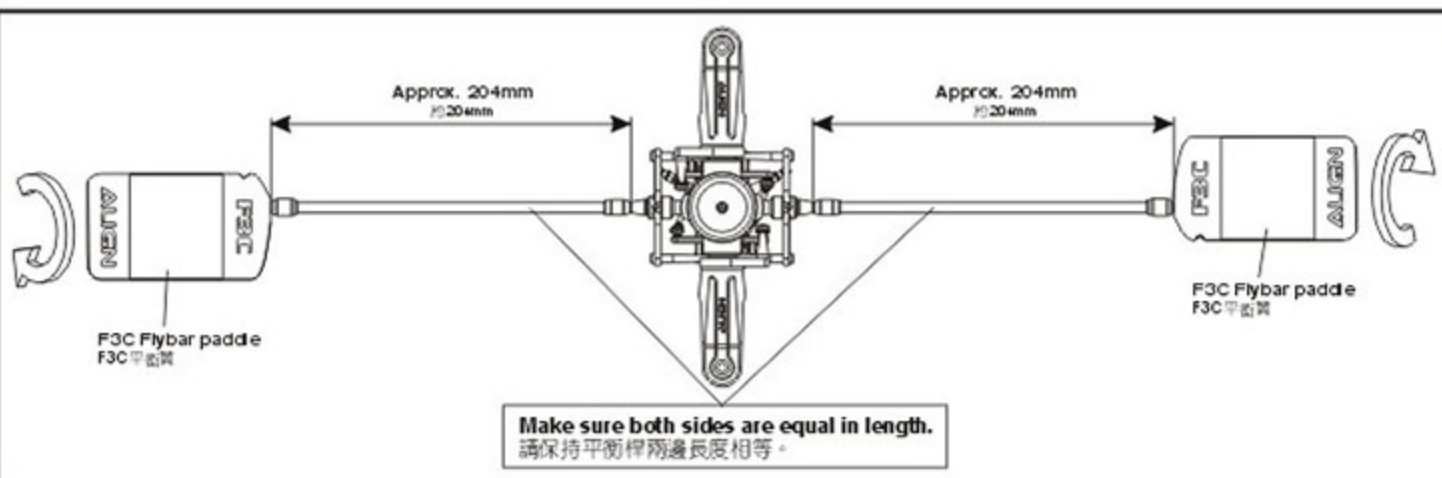


700HB3A



Socket button head screw
半圓頭六角自攻螺絲 (M3x6mm) x 4

Frame mounting block
機身固定塊

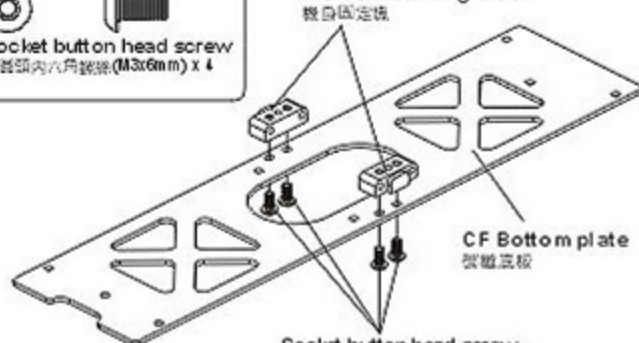

Socket button head screw
半圓頭六角自攻螺絲 (M3x6mm)

700HZ7



Socket screw
圓頭六角自攻螺絲 (M4x10mm) x 4



M4 Washer
M4 墊圈 (4x10x1mm) x 4



 
M4 Set screw
M4 止動螺絲 (M4x4mm) x 2



CAUTION
注意
Make sure the motor mount
is fully fastened before fasten
the motor pinion gear mount.
先將馬達固定座裝緊固定後，再將
馬達齒輪安裝。




Motor
馬達



Motor mount
馬達固定座



 M4 Set screw
M4 止動螺絲 (M4x4mm)



M4 Washer
M4 墊圈 (4x10x1mm)



Socket screw
圓頭六角自攻螺絲 (M4x10mm)

Motor Slant Thread Pinion Gear
馬達斜齒輪
12T

700HB3



Bearing
軸承 (12x24x6mm) x 2



Bearing
軸承 (6x12x4mm) x 1



Socket button head collar screw
半圓頭六角自攻螺絲 (M3x6mm) x 8



Socket button head collar screw
半圓頭六角自攻螺絲 (M3x6mm) x 8

700HB4A



Socket screw
圓頭六角自攻螺絲 (M3x14mm) x 2



Socket collar screw
圓頭六角自攻螺絲 (M3x6mm) x 2



Socket button head screw
半圓頭六角自攻螺絲 (M3x6mm) x 4



Socket button head self tapping
screw
半圓頭六角自攻螺絲 (T2.6x6mm) x 2



Front canopy mounting bolt
前機罩固定柱
6x26mm



Rear canopy mounting bolt
後機罩固定柱
6x31mm

700HB3A



Socket collar screw
圓頭六角自攻螺絲 (M3x6mm) x 18

Socket button head collar screw
半圓頭六角自攻螺絲 (M3x6mm)

Main frames (R)
機殼右側板組
2mm

ESC mount
ESC 固定板

Main shaft block
中軸固定座

Main frames (L)
機殼左側板組
2mm

Rear canopy mounting bolt
後機罩固定柱
6x31mm

Socket button head
screw
半圓頭六角自攻螺絲 (M3x6mm)

Bearing
軸承 (12x24x6mm)

Frame standoff
機身防銹柱

Rear frame mounting
block (R)
右後機身固定塊

Rear frame mounting
block (L)
左後機身固定塊

Bearing
軸承 (6x12x4mm)

motor pinion gear mount
馬達齒輪座

Servo mounting
plate
伺服器固定片

Socket button head
screw
半圓頭六角自攻螺絲 (M3x6mm)

Frame mounting
block
機身固定塊

Receiver mount
接收器座

Hex mounting bolt
六角機身螺絲
2.5x16.5mm

Socket button head
collar screw
半圓頭六角自攻螺絲 (M3x6mm)

Socket button head
self tapping screw
半圓頭六角自攻螺絲 (T2.6x6mm)

Socket collar screw
圓頭六角自攻螺絲 (M3x6mm)


Apply a little amount of T43 thread
lock when fixing a metal part.
裝螺絲時於金屬件固定處用適量 T43 (樂泰膠)

Main frame assembly key point :


First do not fully tighten the screws of main frames and put two bearings through the main shaft to check if the movements are smooth. The bottom bracket must be firmly touched the level table top(glass surface) : please keep the smooth movements on main shaft and level bottom bracket, then slowly tighten the screws. This assembly can help for the power and flight performance.

機身側板組立重點：


側板螺絲先不完全鎖緊，放入主軸貫穿二顆軸承確認上下移動必需滑順，主體底板必須與水平桌面（玻璃平面）接觸緊貼：請保持主軸滑順與底板平行桌面後慢慢鎖緊螺絲，正確側板的組裝對動力與飛行性能有顯著幫助。

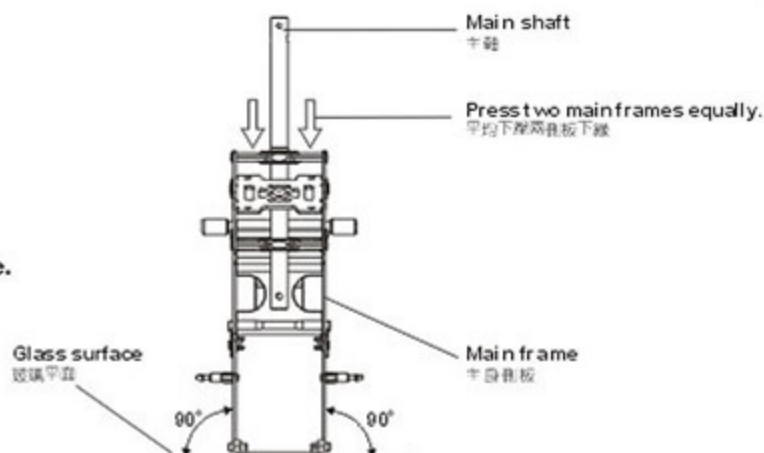

700HG1A

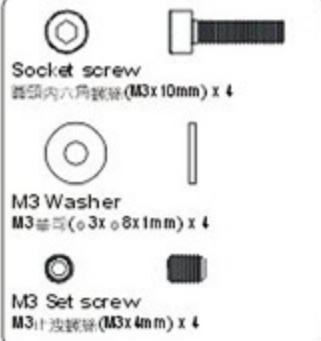

Apply a little amount of T43 thread lock when fixing a metal part.
鎖緊螺絲時於金屬件處塗用適量T43(鎖絲膠)

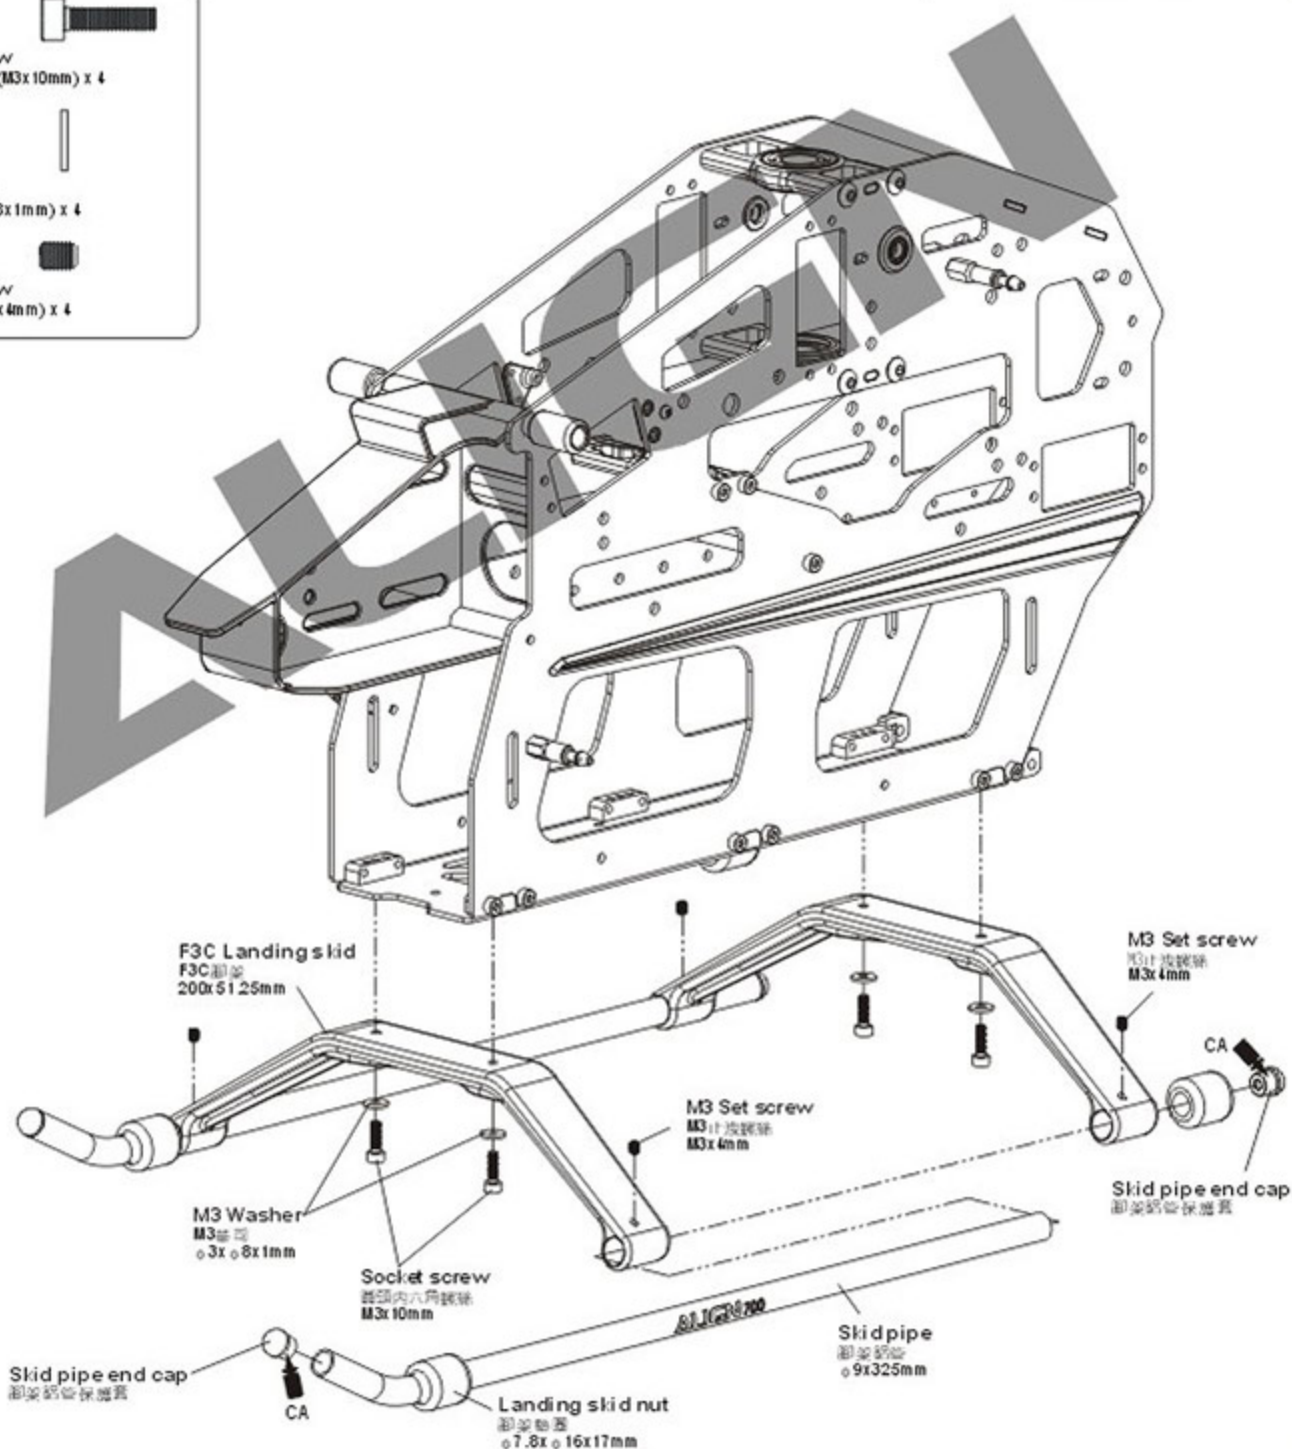

700HZ6

Apply a little amount of T43 thread lock when fixing a metal part.
螺絲鎖附於金屬件時使用適量T43(螺絲膠)

- Linkage ball C(M2x4)
球頭C(M2x4)($\phi 5 \times 9\text{mm}$) x 4
- Socket button head self tapping screw
半圓頭內六角自攻螺絲(T2.6x12mm) x 4
- Socket button head screw
半圓頭內六角螺絲(M2.5x12mm) x 4
- Socket button head screw
半圓頭內六角螺絲(M3x6mm) x 4
- M2 Nut
M2螺帽 x 4

Metal elevator servo mount
金屬升降伺服器座

DS610 Servo
DS610伺服器

Socket button head screw
半圓頭內六角螺絲
M2.5x12mm

Linkage ball C(M2x4)
球頭C(M2x4)
 $\phi 5 \times 9\text{mm}$

CNC Metal servo horn
CNC金屬伺服器舵角片

M2 Nut
M2螺帽

3K CF servo plate
3K碳纖維伺服器座片

CAUTION
注意

3G Flybarless system uses inner hole(A)
Flybar system uses outer hole(B)
3G無平衡翼系統使用內孔(A)
有平衡翼系統使用外孔(B)

CNC Metal servo horn
CNC金屬伺服器舵角片

Use the outer hole
請鎖附於外孔



F servo horns :
Compatible with Align DS6xx
series and Futaba servos.
F伺服器舵角片 :
適用於Align DS6系列伺服器及Futaba伺服器。

3K CF servo plate
3K碳纖維伺服器座片

Linkage ball C(M2x4)
球頭C(M2x4)
 $\phi 5 \times 9\text{mm}$

CNC Metal servo horn
CNC金屬伺服器舵角片


M2 Nut
M2螺帽

Socket button head self tapping screw
半圓頭內六角自攻螺絲
T2.6x12mm

DS610 Servo
DS610伺服器

- DS610 Digital Servo :
1. 1520 μs standard band / 1520 μs 寬頻系統
 2. Stall torque/輸出扭力 : 9.6kg.cm(4.8V)
12.0kg.cm(6.0V)
 3. Motion speed/動作速度 : 0.10sec/60° (4.8V)
0.08sec/60° (6.0V)
 4. Dimension/尺寸 : 40.3 x 20.1 x 36mm
 5. Weight/重量 : 52.2g

700HZ6

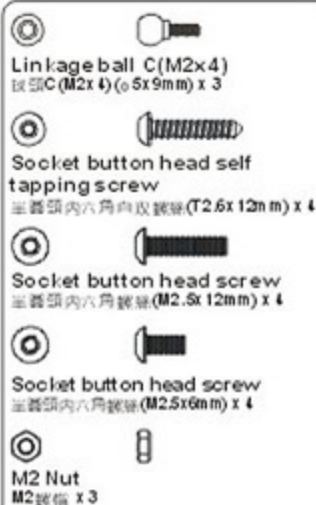


700HB3A



Recommend sanding the marked position as below illustration with a waterproof abrasive paper (#800-1000) to avoid the wires of electric parts to be cut.

建議於下圖色塊標示處，使用#800-1000水砂紙打磨，可防止電子設備電線被割斷。

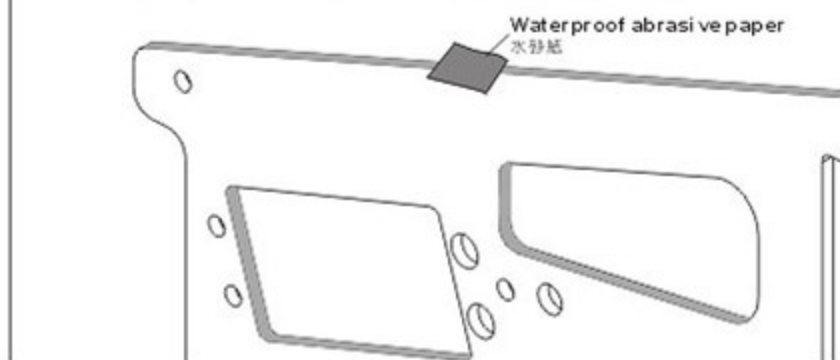


CAUTION

Make sure the motor mount is fully fastened before fasten the motor pinion gear mount.
先將馬達固定座鎖緊固定後，再將馬達齒輪座鎖緊。

D S6 10 Digital Servo :

1. 1520 μs standard band / 1520 μs 寬頻系統
2. Stall torque / 輸出扭力 : 9.6kg.cm (4.8V)
12.0kg.cm (6.0V)
3. Motion speed / 動作速度 : 0.10sec/60° (4.8V)
0.08sec/60° (6.0V)
4. Dimension / 尺寸 : 40.3 x 20.1 x 36mm
5. Weight / 重量 : 52.2g

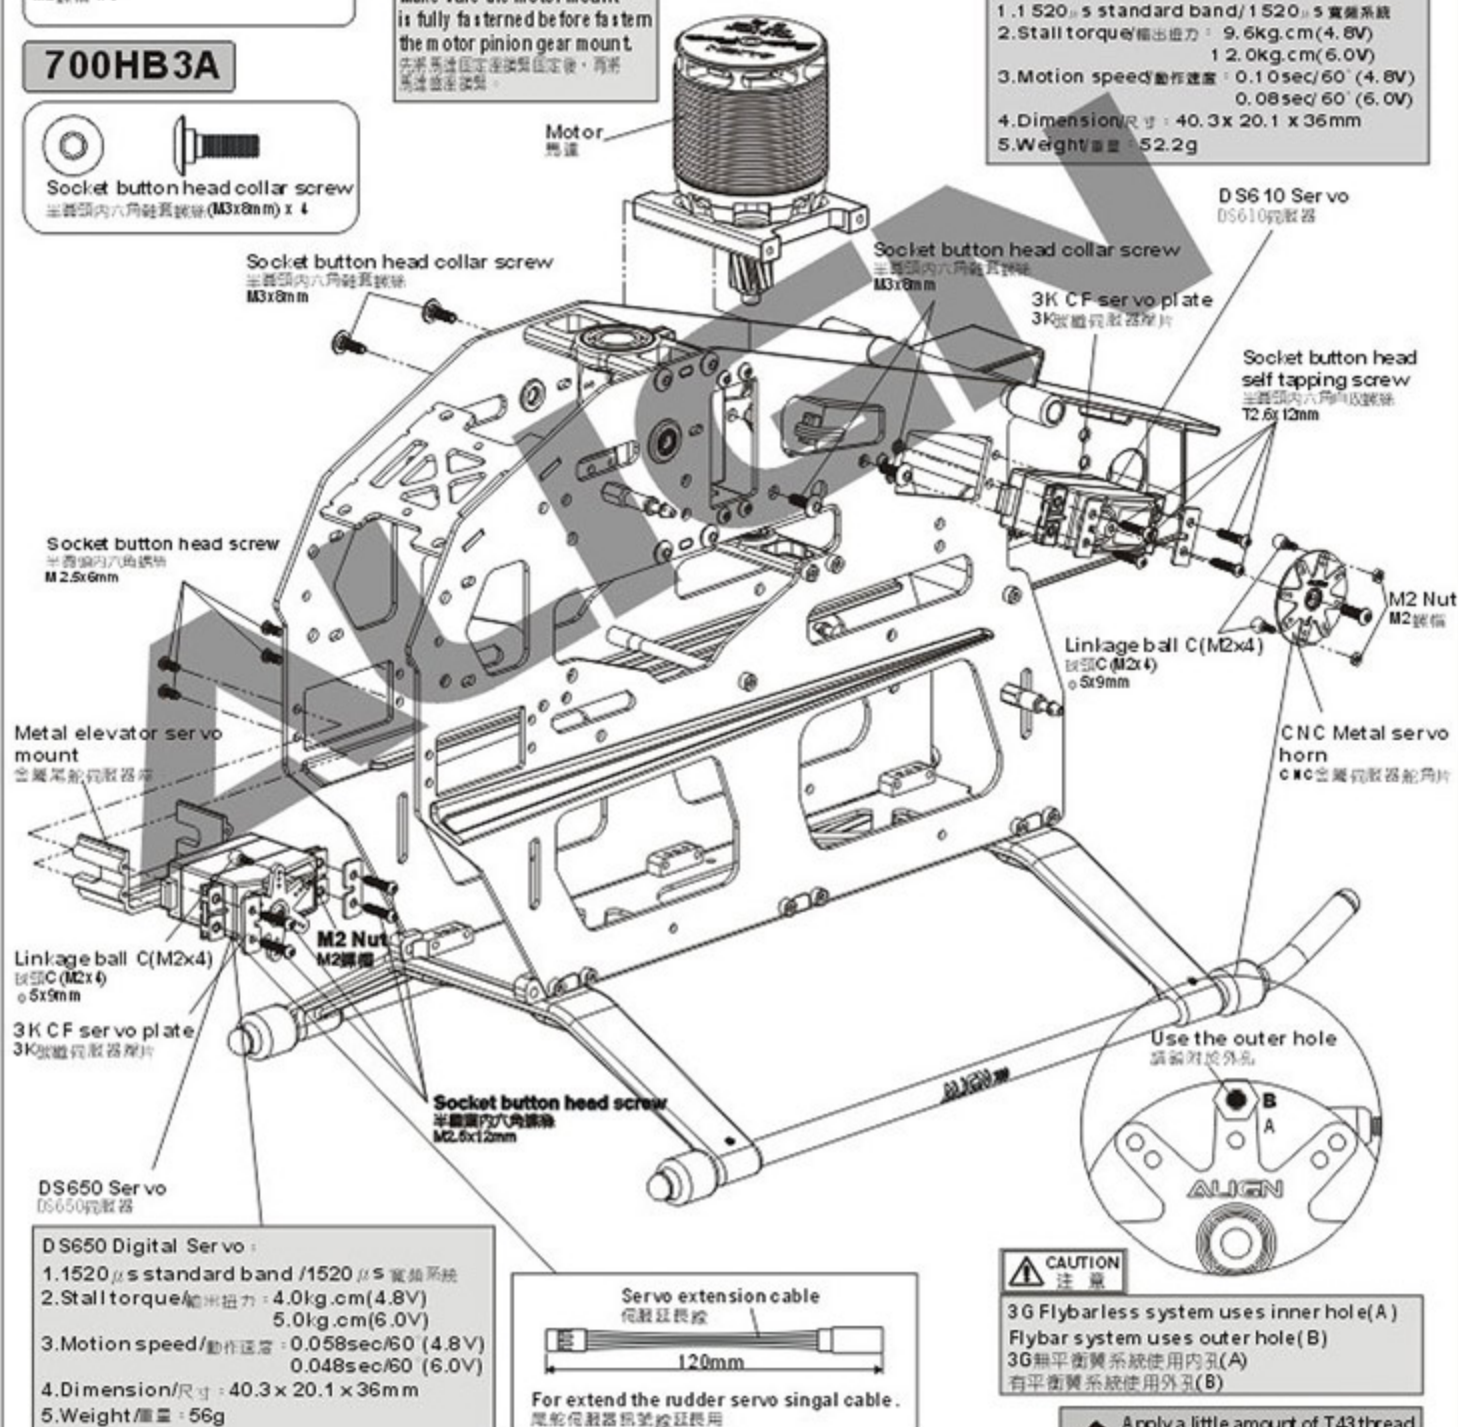

700HB3

 



700HB3A



Please fasten the elevator ball link and screws all the way in.
升降臂连接杆及螺栓要拧紧。

700H22

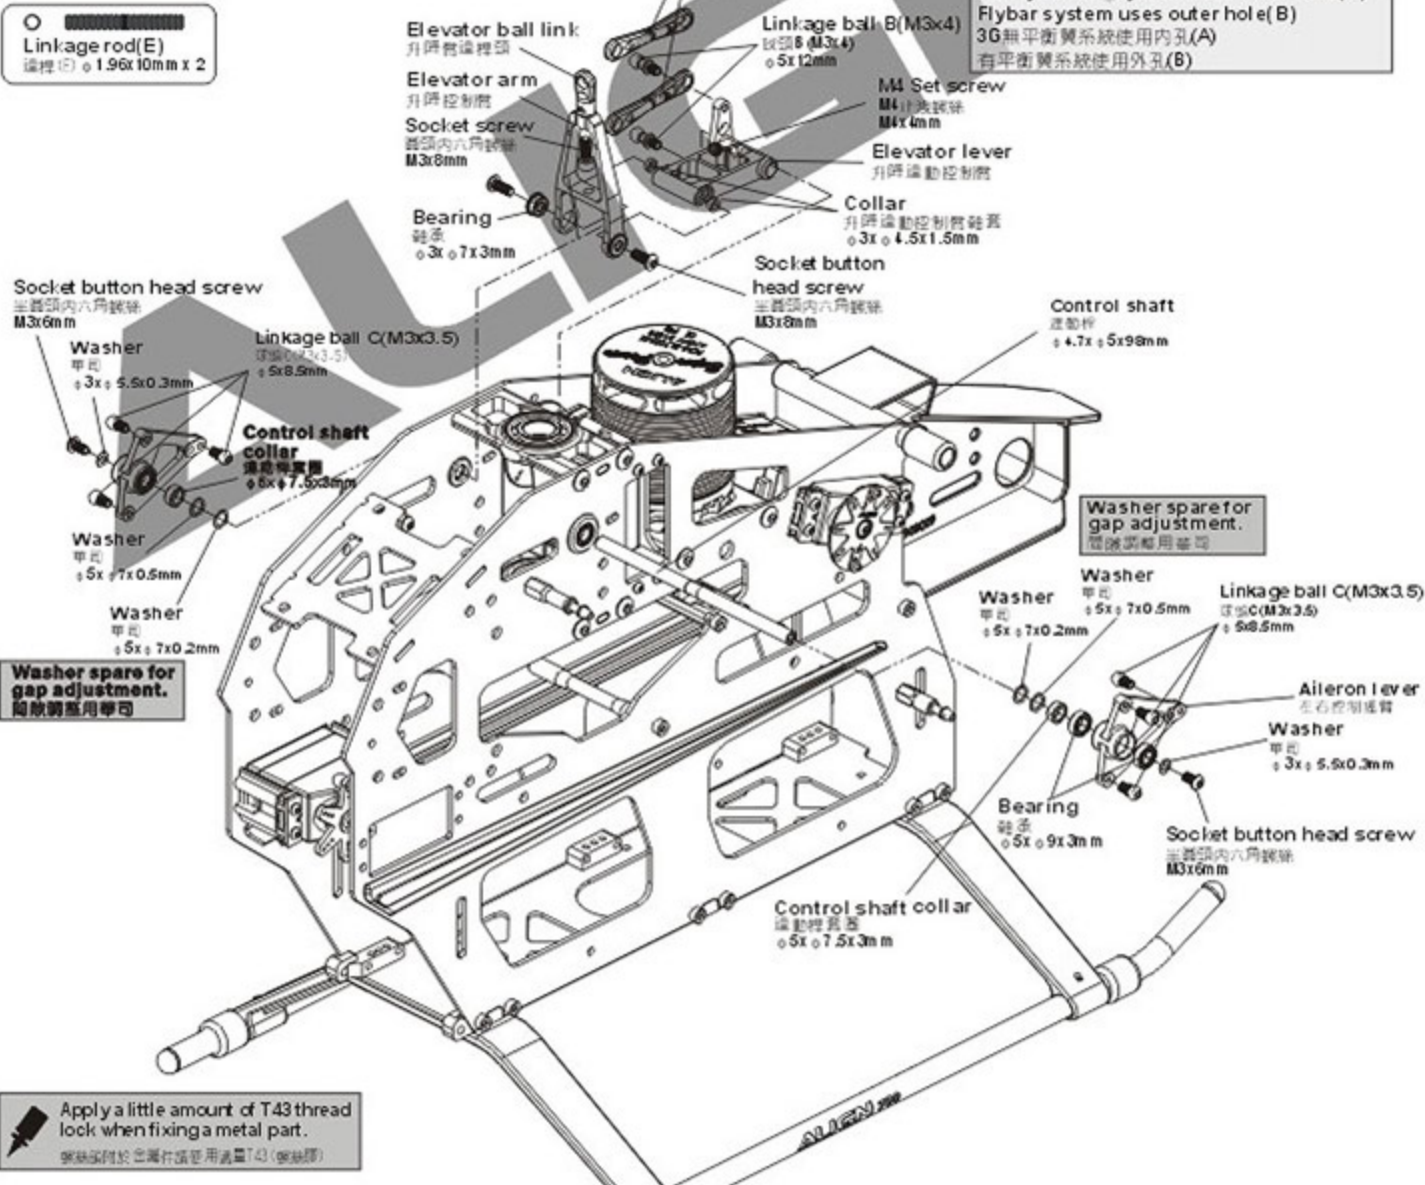

3G Flybarless system uses inner hole (A)
Flybar system uses outer hole (B)
3G 无平衡翼系统使用内孔 (A)
有平衡翼系统使用外孔 (B)

Apply a little amount of T43 thread lock when fixing a metal part.
安装金属件时请用少量T43 (密封胶)

700HZ2



Aileron Control rod Carbon Fiber Shaft
升降控制桿碳纖維管 (ø 4x 5.4x65mm) x 8

Aileron Control rod Carbon Fiber Tube
升降控制桿碳纖維管 (ø 22x 0.39x96mm) x 4

Linkage rod(F)
連接桿(F) ø 1.96x110mm x 4

700HZ2A



Ball link
連接頭 x 8

Aileron Carbon Fiber Linkage Rod Set

副翼控制碳纖維連桿組要領

Put on AB Glue
塗上AB膠

AB

- 1: Mix thoroughly suitable amount of epoxy.
- 2: Apply generous amount of epoxy on the tips of carbon tube after sliding over the linkage rod. (Suggest to use the AB glue that hardened in 30 mins.)
(Note: for quick drying epoxy, work fast as it must be applied prior to curing)

1: 使用適量的AB膠，並且均勻的攪拌混合
2: 將已套入連桿的碳纖維管兩端塗上AB膠(建議使用30分鐘硬化的AB膠)
(注意:若使用速乾型AB膠請務必於膠乾前組裝完成)



- 3: Slide the carbon end caps on both sides of the carbon tube.

3: 接著將碳纖套分別套入碳纖管兩端



- 4: Thread the ball links onto the linkage rod until the base to base length is 97.5mm.


4: 將連接頭鎖入連桿至跨距為97.5mm的位置




- 5: If gap exists between the ball link and end caps after correct length has been achieved, slide the end caps outwards to cover the gaps
(note: must be done before epoxy cures)

- 6: Wipe away excess epoxy and set it aside to cure.


5: 碳纖套與連接頭會有些許的間隙，此時請將碳纖套向外側推至切齊連接頭
(注意:須在AB膠未乾之前完成此動作)
6: 將多餘的殘膠擦乾淨後請靜置AB膠乾固方可使用

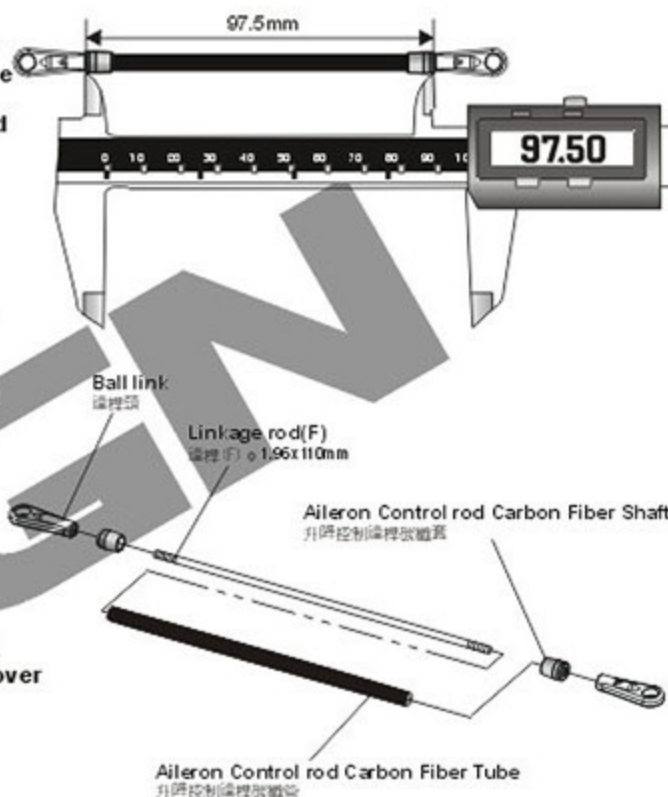

Linkage rod(F)
Approx. 130.5mm x 4
連接桿(F) 約 130.5mm x 4

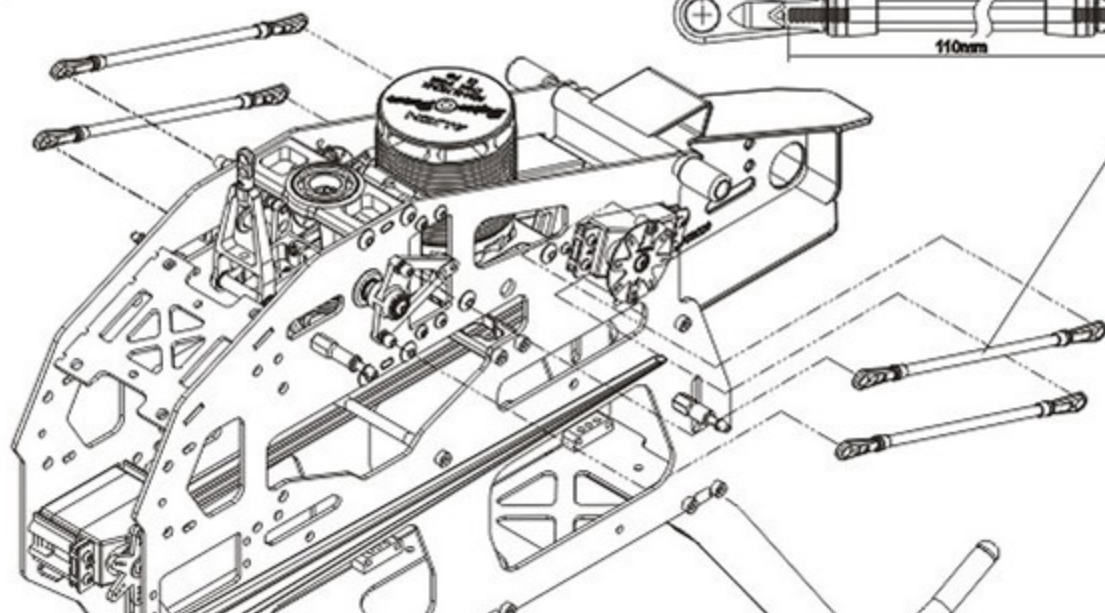


700HT1

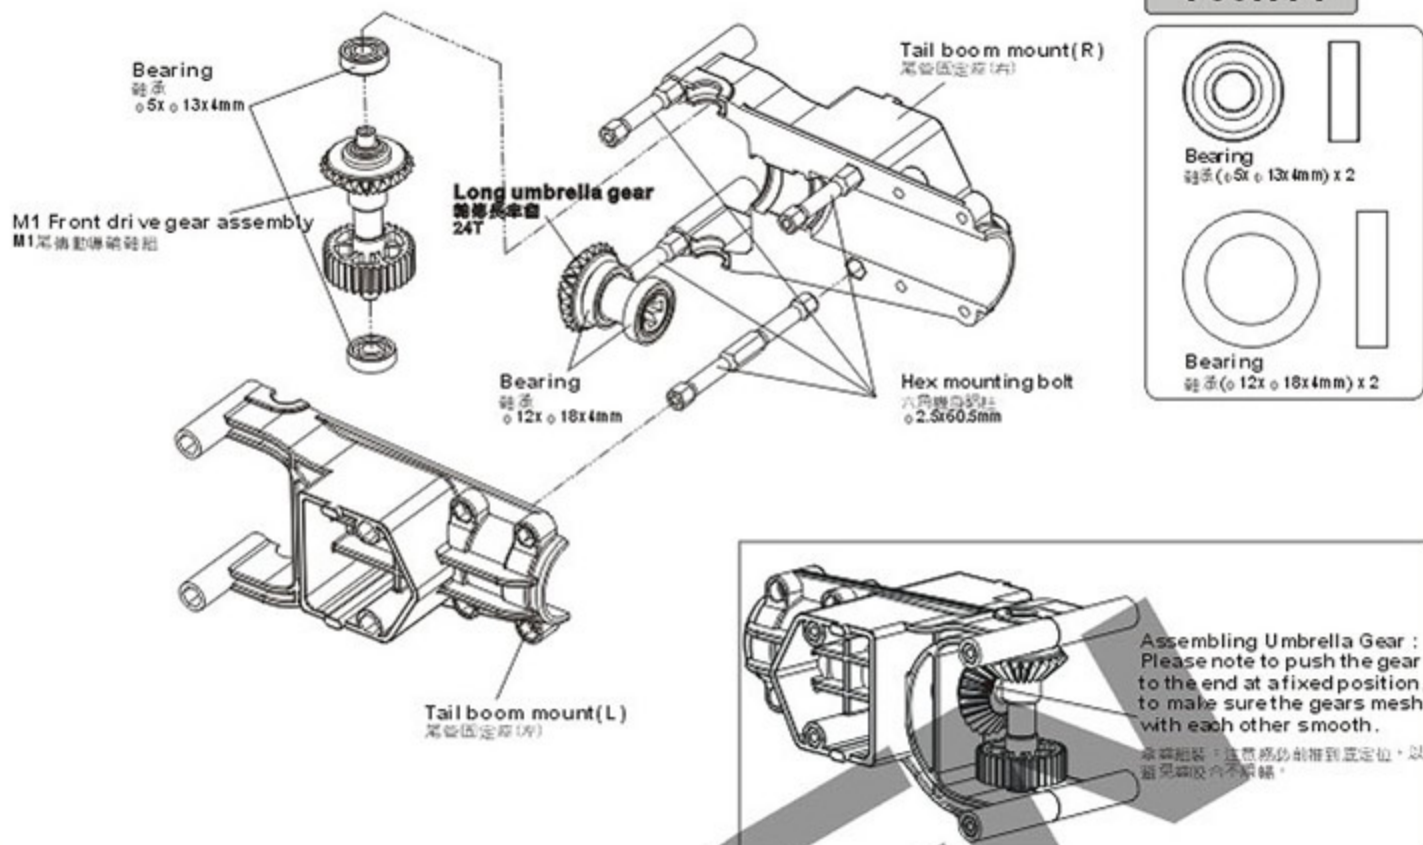


700HT4


Apply a little amount of T43 thread lock when fixing a metal part.
安装金属件时，请适量使用T43螺纹锁固剂。

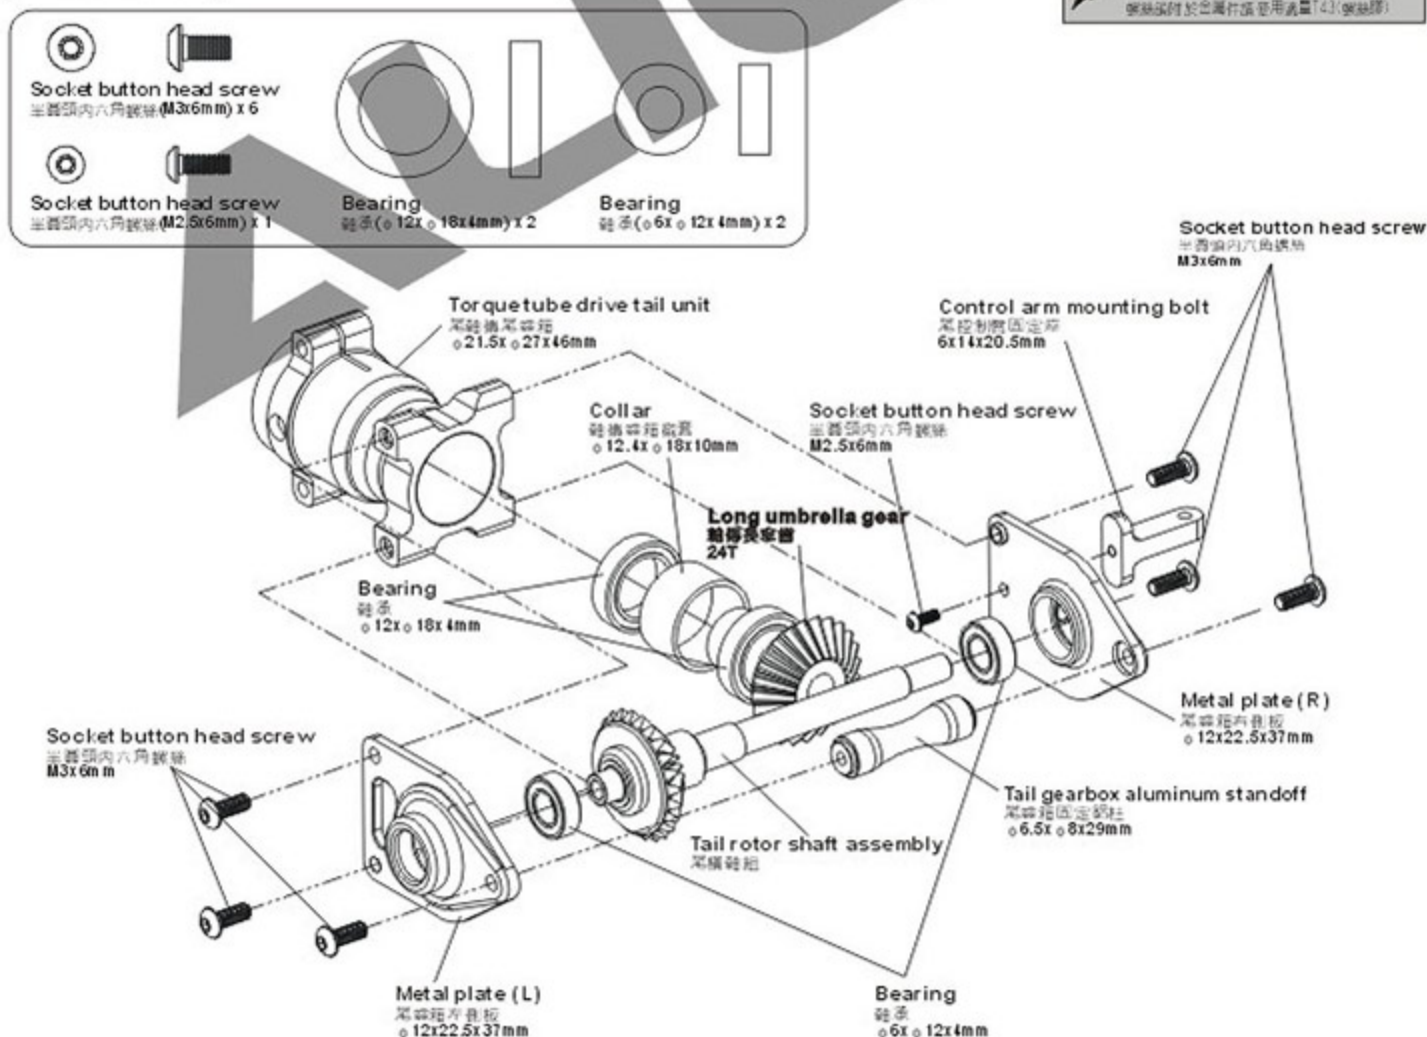

700NT2F

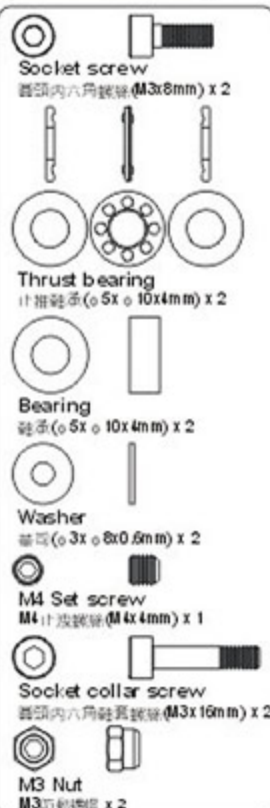


700NT2G

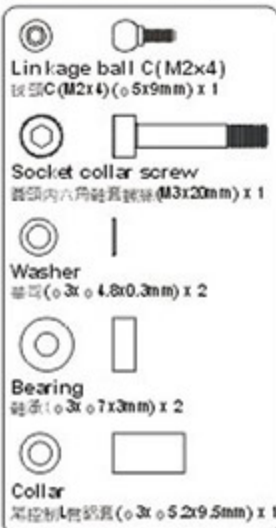

700NT2D



 Apply a little amount of T43 thread lock when fixing a metal part.
裝緊螺絲時於金屬零件處使用適量 T43 螺絲膠。




While assembly the slide shaft, please use suitable amount of T43 on the thread. Please do not use R48 anaerobics retainer or other high strength glue to avoid damages while maintenance or repairs.
組立尾軸滑套時，請使用適量的T43螺絲膠在螺絲上，嚴禁使用R48無膠合性軸承膠防止膠合過緊，以避免日後拆換維護零件之損壞。



Aim tail rotor hub at the concave of tail rotor shaft and fix it, please apply a little glue on the set screw.
尾軸蓋T型座對準尾軸的凹面，並將其固定，請在止鎖螺絲上塗抹適量T43螺絲膠。

Assembling Umbrella Gear: Please note to push the gear to the end at a fixed position, to make sure the gears mesh with each other smoothly.
組立傘齒輪：注意將傘齒輪推到固定位置，以確保齒輪咬合平穩。

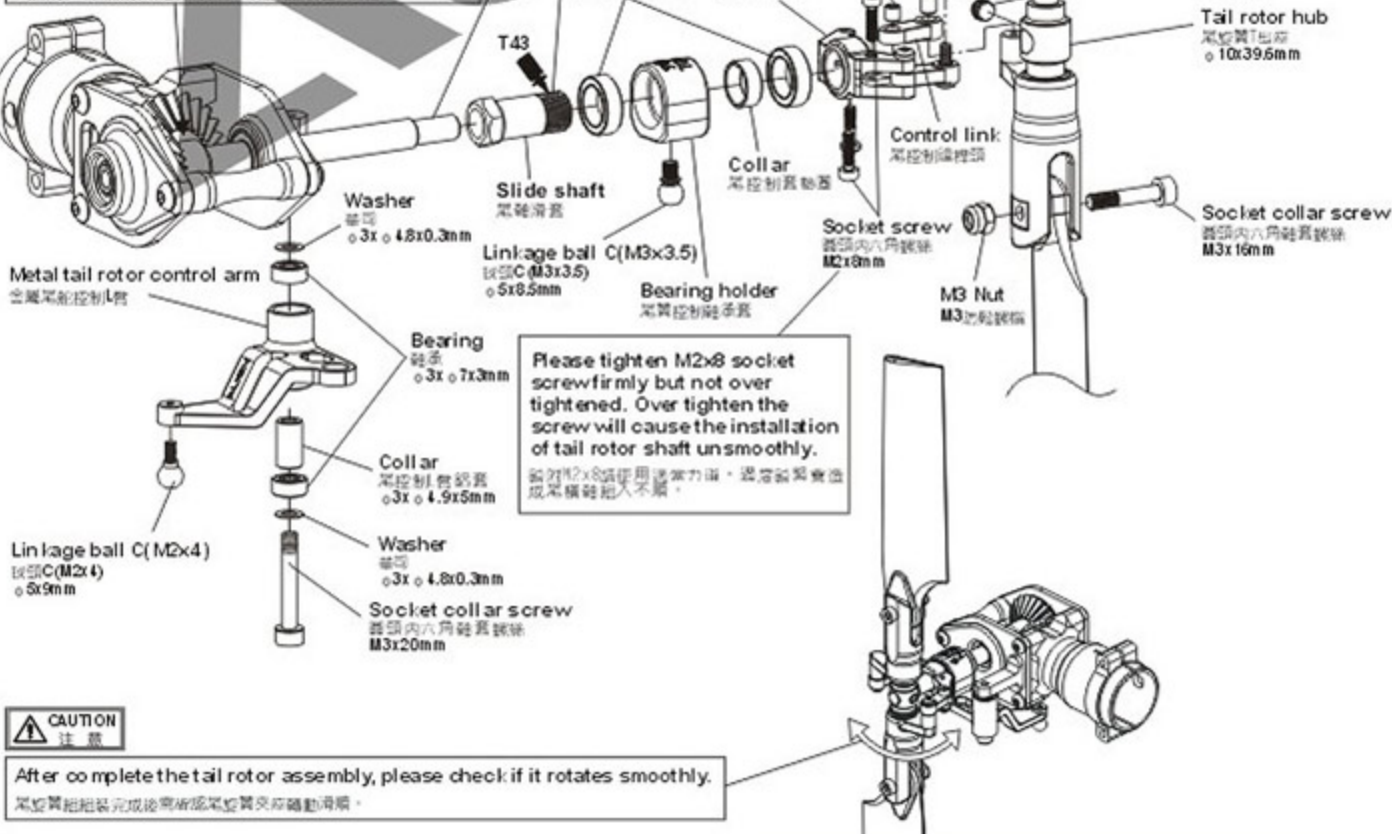

Already assembled by factory,
please note to check again.
已組裝完成，請務必再行確認。

Socket screw
蓋頭內六角螺絲
M3x14mm

When assembling into the tail boom, please
apply some oil on the surface, to make it
smooth during the assembling and keep it
vertical with the torque tube for smooth
rotation.
插入尾管內時，外表抹些潤滑油，以確保平滑插入尾管中而
與尾管軸線保持垂直，讓尾管能順暢轉動。

When assembling
the tail boom,
please aim at the
fixing hole $\phi 5.1$
裝入尾管時請注意對準
編號為 $\phi 5.1$ 固定孔。

700NFL Ball link
700NFL球桿頭

M3 Nut
M3 螺絲帽

Torque tube
不銹鋼軸桿

Socket collar screw
蓋頭內六角螺絲
M3x22mm

M3 Specialty washer
M3 特製墊圈
 $\phi 3x\phi 8x2mm$

Socket self tapping screw
蓋頭內六角自攻螺絲
T4x10mm

F3C CF Horizontal stabilizer
F3C 碳纖維平翼

Metal vertical stabilizer mount
金屬垂直安定面座

Tail control guide
尾控制桿固定板

3K Tail boom
3K 碳纖維尾管
785mm

Stabilizer mount (Upper)
水平安定面固定上座

M3 Specialty washer
M3 特製墊圈
 $\phi 3x\phi 8x2mm$

Before assembling, please wrap
the tail boom with a scotch tape
(Thickness 0.03-0.05mm)
to avoid the mount slipping.
安裝前請先用透明膠帶(0.03-0.05mm厚)
包圍尾管，可防止固定座滑動。

Tail boom brace set
尾管支撐組

Socket screw
蓋頭內六角螺絲
M3x26mm

Stabilizer mount (Lower)
水平安定面固定下座

F3C CF Vertical stabilizer
F3C 碳纖維垂直安定面

700NT1A

Socket screw
蓋頭內六角螺絲(M3x14mm) x 4

M3 Nut
M3 螺絲帽 x 4

700HT4

Socket screw
蓋頭內六角螺絲(M3x26mm) x 2

M3 Specialty washer
M3 特製墊圈($\phi 3x\phi 8x2mm$) x 2

700NT2EA

Socket screw
蓋頭內六角螺絲(M4x12mm) x 2

Socket collar screw
蓋頭內六角螺絲(M3x22mm) x 2

M3 Specialty washer
M3 特製墊圈($\phi 3x\phi 8x2mm$) x 2

M4 Washer
M4 墊圈($\phi 4x\phi 10x1mm$) x 2

700HT6


700NFL Ball link
700NFL 球桿頭 x 2

700HT6A

Socket self tapping screw
蓋頭內六角自攻螺絲(T4x10mm) x 2


Tip to fix the torque tube 傳動軸軸承固定位置要領

Please apply some CA glue to fix bearing on the torque tube, avoid CA glue from the dust or may
cause the bearing stuck. When assembling into the tail boom, please apply some oil and use the
attached torque tube mount helper to press the bearing holder of the torque tube into the tail boom
horizontally.
請以少量CA膠將軸承固定於傳動軸上，避免CA膠沾到軸承的防塵蓋而導致軸承卡死。插入尾管內時，尾管軸承座面外表
抹些潤滑油，利用隨附軸承安裝套將尾管軸承座面平行壓入尾管中不可歪斜。

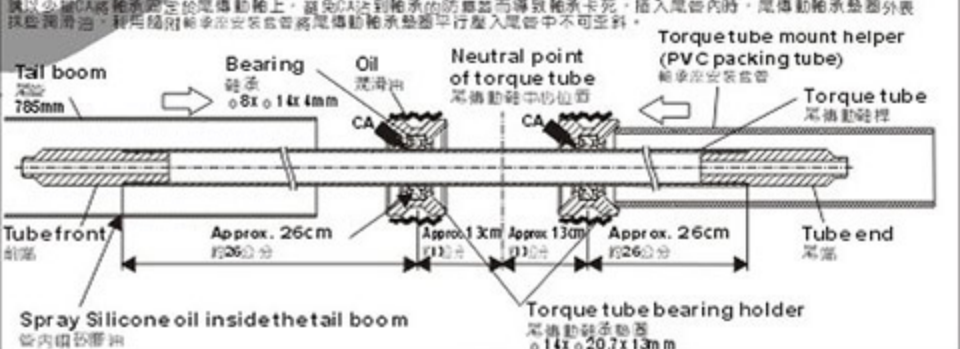

CAUTION
注意

Skewed Torque tube bearing holder will interfere with
torque tube rotation and cause unusual vibration.
尾管軸承座安裝歪斜會造成傳動軸旋轉不順及尾部
異常震動等問題。

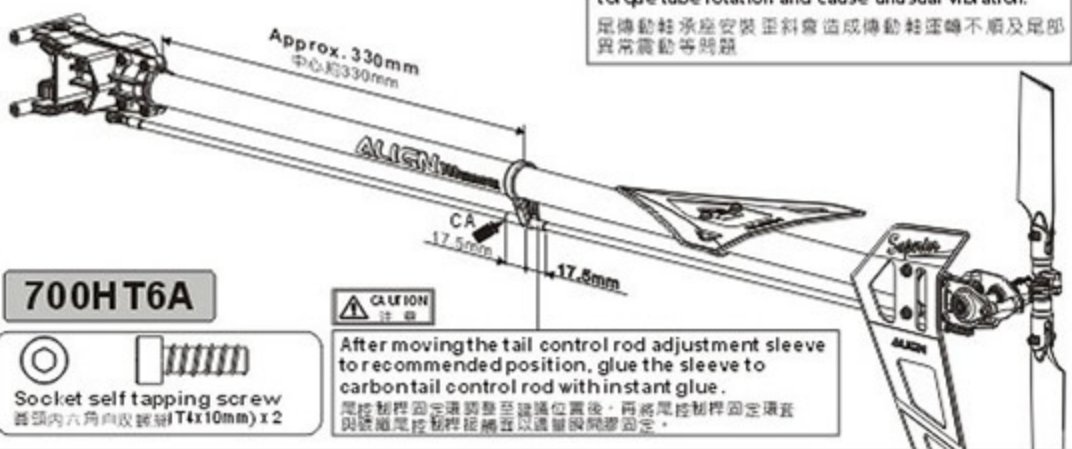

CAUTION
注意

After moving the tail control rod adjustment sleeve
to recommended position, glue the sleeve to
carbon tail control rod with instant glue.
尾管控制桿固定環調整至建議位置後，再將尾管控制桿固定環套
與碳纖維尾管控制桿套以瞬間膠固定。

Apply a little amount of T43 thread lock when fixing a metal part.
螺絲鎖附於金屬件時使用適量T43(螺絲膠)

Socket button head collar screw
半圓頭內六角輪蓋螺絲
M3x8mm

Socket button head collar screw
半圓頭內六角輪蓋螺絲
M3x8mm

M4 Washer
M4華司
4x10x1mm

Socket screw
圓頭內六角螺絲
M4x12mm

700HB3A

700NT1A

Socket screw
圓頭內六角螺絲(M4x12mm) x 2

M4 Washer
M4華司(4x10x1mm) x 2

Socket button head collar screw
半圓頭內六角輪蓋螺絲(M3x8mm) x 8

Socket screw
圓頭內六角螺絲(M4x8mm) x 1

Socket screw
圓頭內六角螺絲
M4x8mm
Tail boom fixing screw
尾管固定螺絲

700HB7

Socket button head screw
半圓頭內六角螺絲
M3x6mm


CNC Slant Thread Main Drive Gear
CNC斜主齒輪
112T

CAUTION 注意

Already assembled by Factory. Before flying, please check if the screws are fixed with glue.
原裝組裝完成品。每次飛行前請先確認螺絲是否已上膠不會鬆動。

Please note the direction of bearing.
請注意軸承方向

Bearing
軸承(15x21x4mm) x 2

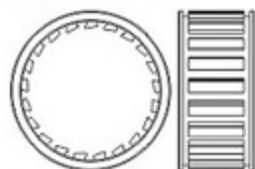

One-way bearing
單向軸承(15x23x11mm) x 1

Socket screw
圓頭內六角螺絲(M2.5x8mm) x 6

Socket button head screw
半圓頭內六角螺絲(M3x6mm) x 6

One-way bearing shaft
單向軸承蓋
12x15x41.5mm

One-way bearing collar
單向軸承外環
6x23x11.6mm

One-way bearing cover
單向軸承上蓋
21x15.8x26mm

One-way bearing
單向軸承
15x23x11mm

Bearing
軸承
15x21x4mm

One-way bearing mount
單向軸承下座
21x6.5x33.1mm

Socket screw
圓頭內六角螺絲
M2.5x8mm

Apply grease
塗上潤滑油

M1 Autorotation tail drive gear
M1尾驅動主齒
104T

Before tightening the screw, please rotate the bearing and check the concentricity of the bearing. Then apply some glue evenly on the screw and tighten it firmly, to avoid the bearing stuck or heavy load at one side and cause slip.
上緊螺絲前請先旋轉軸承並檢查軸承的同心度。然後在螺絲上均勻塗上適量T43螺絲膠，以確保螺絲上緊後軸承不會卡死或偏重導致打滑。

Apply a little amount of T43 thread lock when fixing a metal part.
螺絲鎖附於金屬件時使用適量T43(螺絲膠)

When tightening the main blade fixing screw, please tighten it firmly, but not over tighten, or it may cause the damage of main blade holder and result in danger.
鎖緊主旋翼螺絲時須注意適當緊度即可，過緊可能導致主旋翼夾座受損，飛行意外發生。

Socket collar screw
圓頭內六角鉸套螺絲
M5x32mm

700 F3C Blade
700 F3C 主旋翼

M5 Nut
M5防鬆螺帽

700NH1A

Main Blade Fixing Screw
鎖主旋翼用螺絲



Socket collar screw
圓頭內六角鉸套螺絲(M5x32mm) x 2



M5 Nut
M5防鬆螺帽 x 2

700HB7



Socket collar screw
圓頭內六角鉸套螺絲(M4x27mm) x 1




M4 Nut
M4防鬆螺帽 x 1


700NH4A




Main shaft spacer(1)
主軸墊片(1)($\phi 12 \times \phi 16 \times 1 \text{ mm}$) x 1

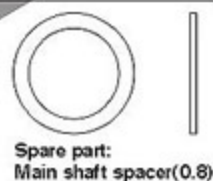

Spare part:
Main shaft spacer(0.8)
備品：主軸墊片(0.8)
($\phi 12 \times \phi 16 \times 0.8 \text{ mm}$) x 1

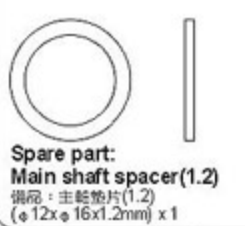

Spare part:
Main shaft spacer(1.2)
備品：主軸墊片(1.2)
($\phi 12 \times \phi 16 \times 1.2 \text{ mm}$) x 1

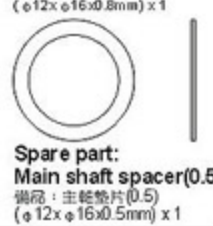

Spare part:
Main shaft spacer(0.5)
備品：主軸墊片(0.5)
($\phi 12 \times \phi 16 \times 0.5 \text{ mm}$) x 1

Standard Equipment :
Main shaft spacer(1)
標準品：主軸墊片(1)
 $\phi 12 \times \phi 16 \times 1 \text{ mm}$

Spare part : Main shaft spacer(1.2)
Main shaft spacer(0.8)
Main shaft spacer(0.5)
備品：主軸墊片(1.2) $\phi 12 \times \phi 16 \times 1.2 \text{ mm}$
主軸墊片(0.8) $\phi 12 \times \phi 16 \times 0.8 \text{ mm}$
主軸墊片(0.5) $\phi 12 \times \phi 16 \times 0.5 \text{ mm}$

Linkage rod(D)
Approx. 59mm x 2
連桿(D)約59mm x 2

39.5mm
26mm

M1 Slant thread main drive
gear set
M1斜主齒輪組

M4 Nut
M4防鬆螺帽

 
Socket screw
圓頭內六角鉸套螺絲
M4x27mm

700HZ2A





Ball link
連桿 x 4

700HZ2




Linkage rod(D)
連桿(D)($\phi 1.96 \times 39.5 \text{ mm}$) x 2


Before fastening the M4 set screw, make sure the motor pinion gear is contacted with the bearing in the motor gear case downward.
馬達主齒向下頂到馬達齒座軸承後，再將M4止洩螺絲鎖緊。

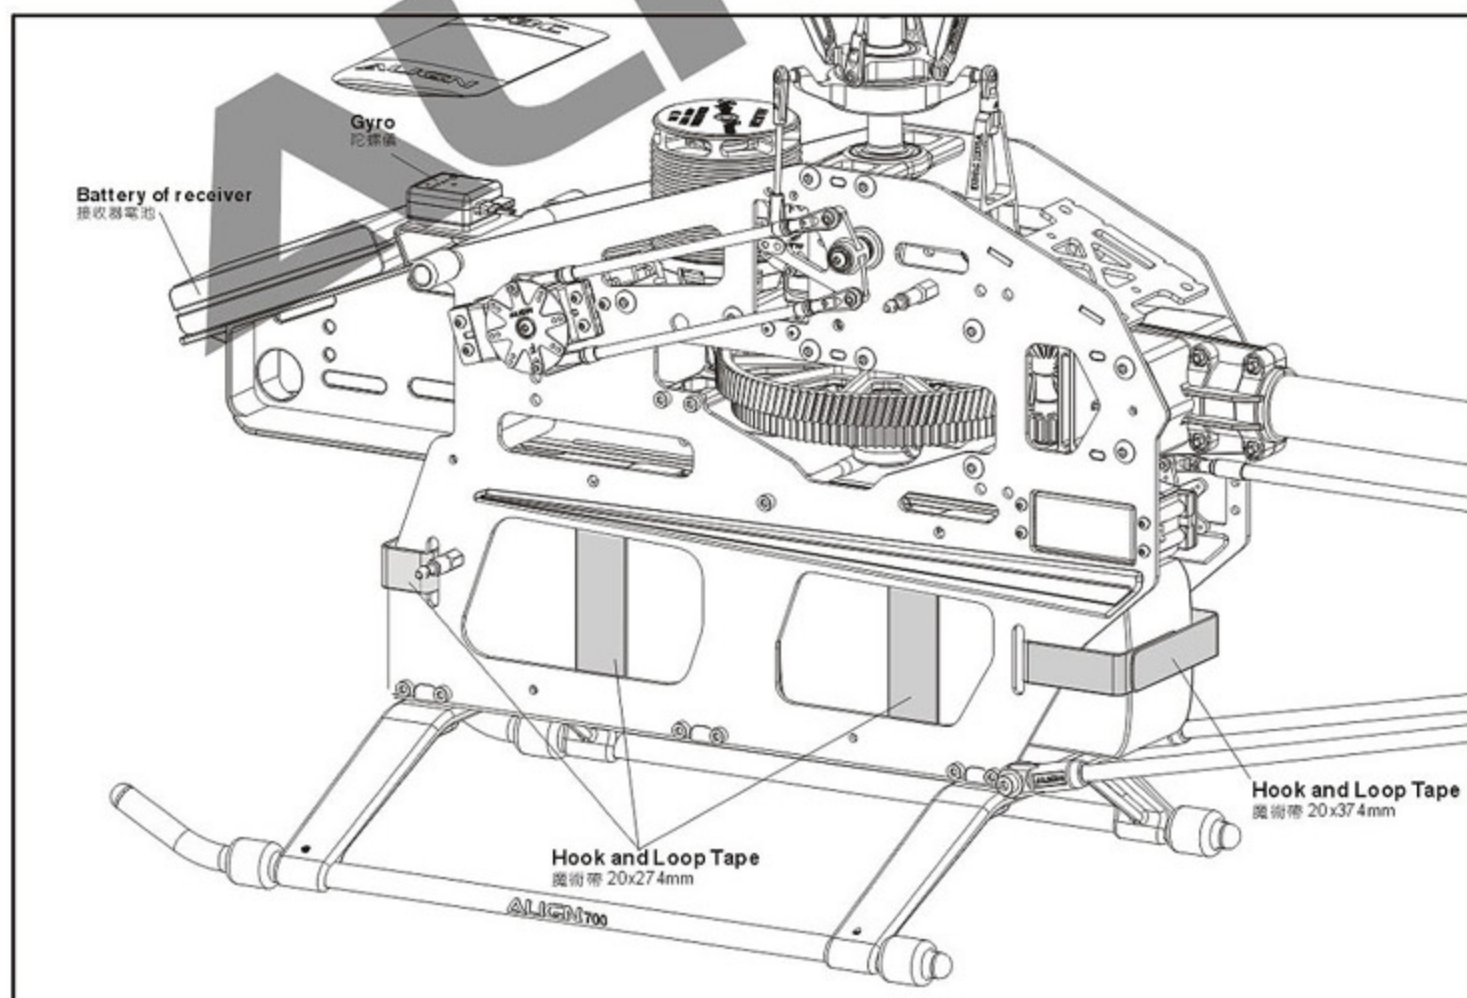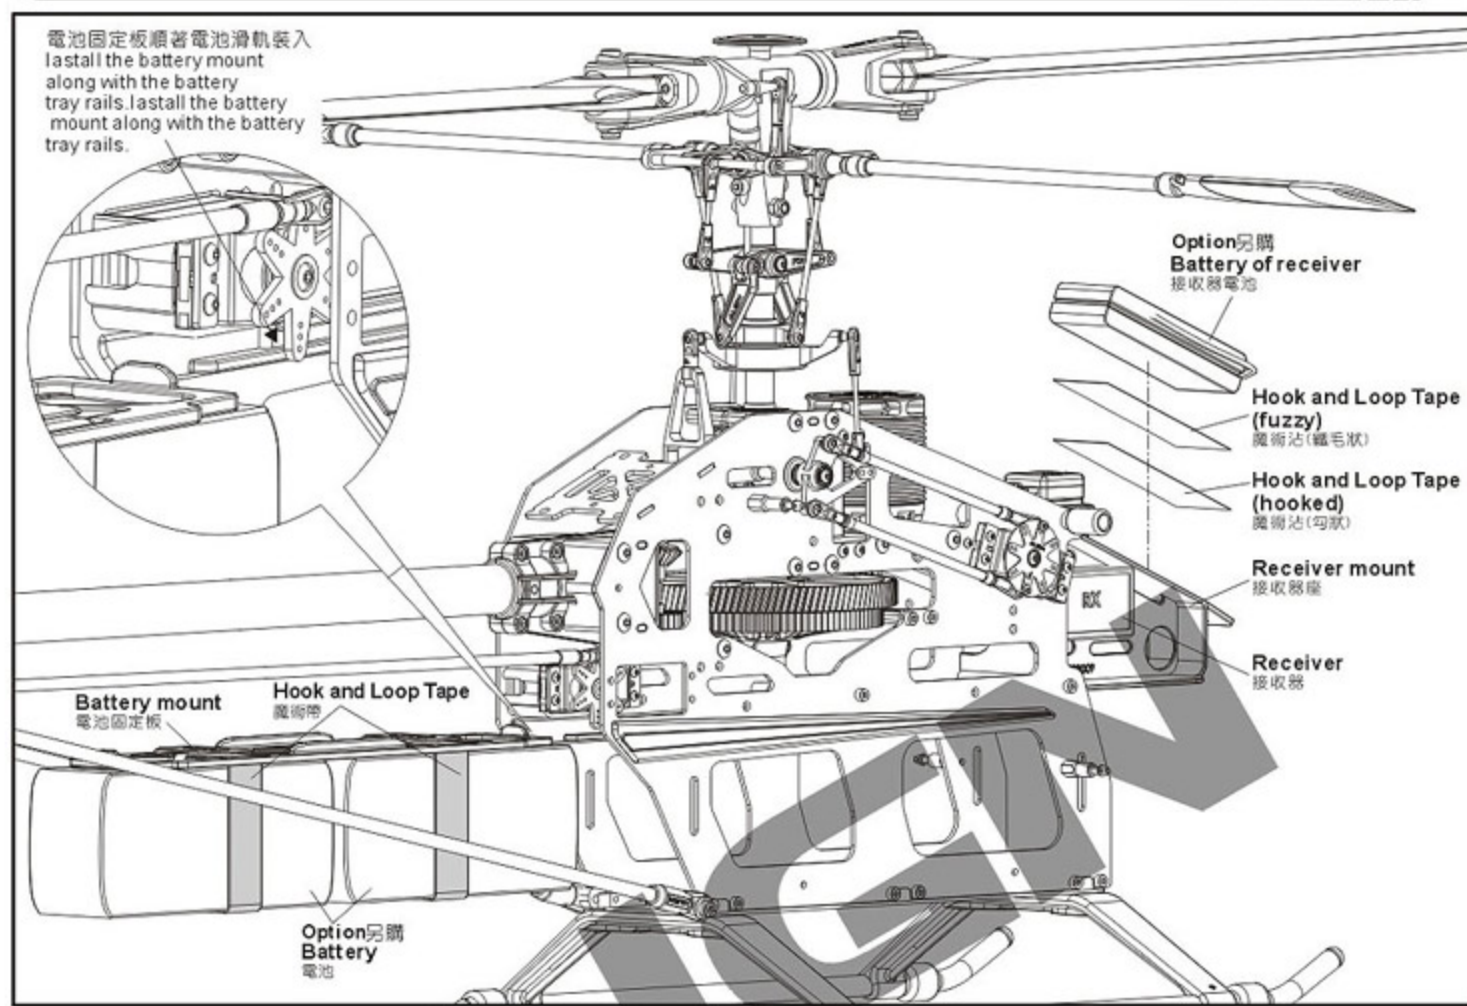


Battery installation illustration(1) 電池安裝示意圖(1)

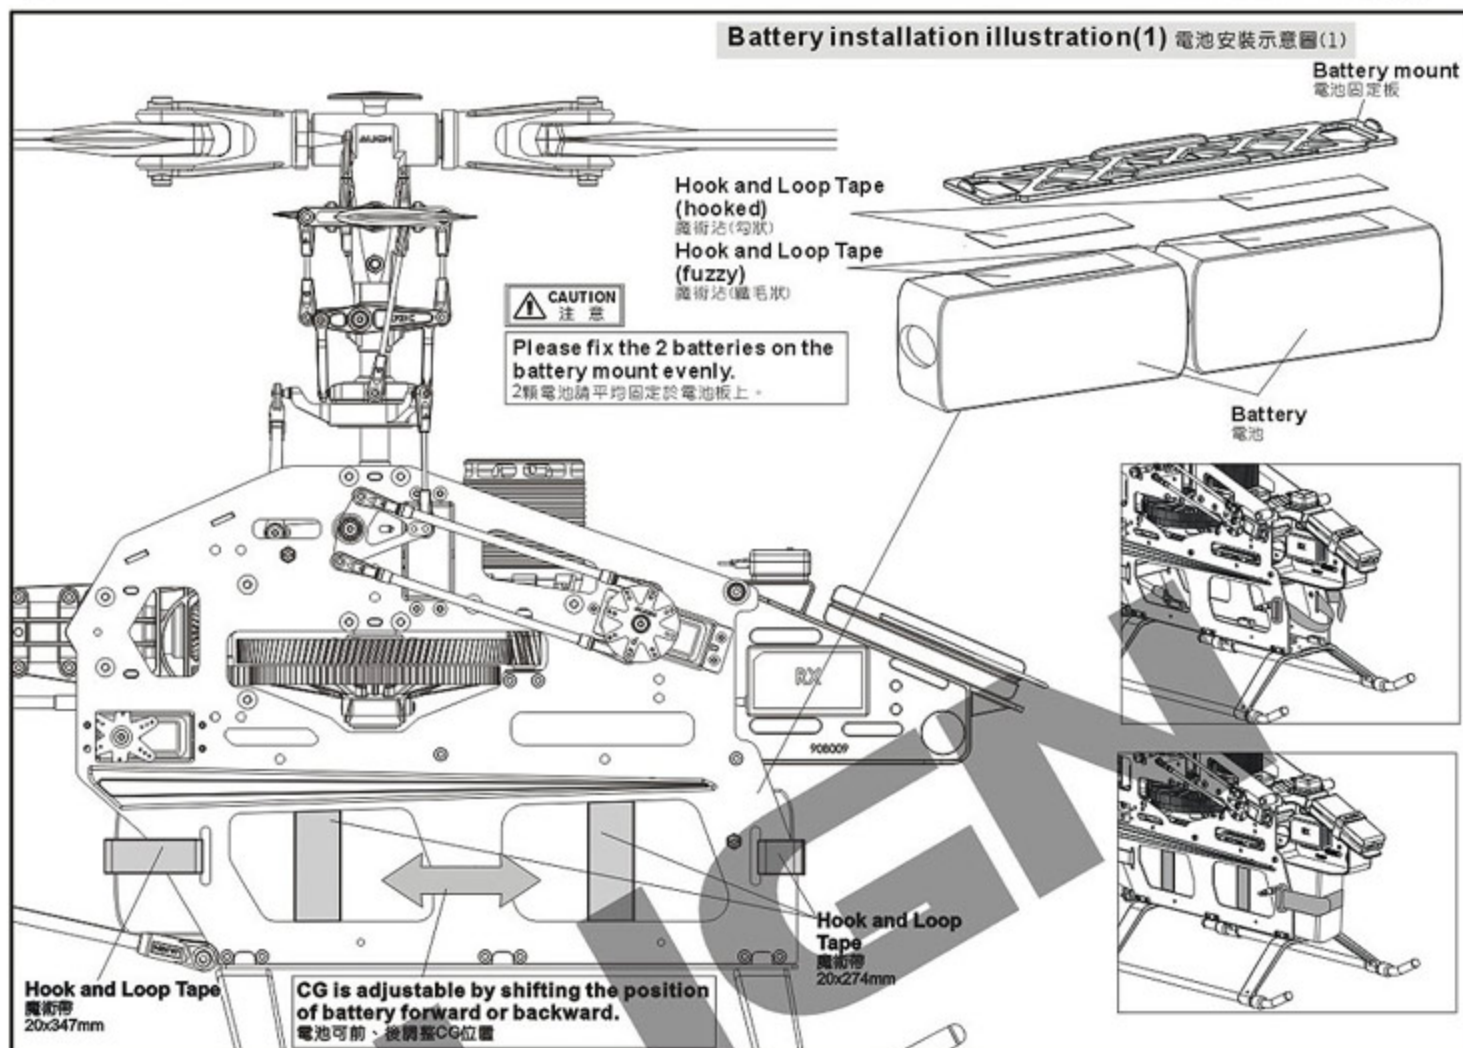



Battery installation illustration(2) 電池安裝示意圖(2)

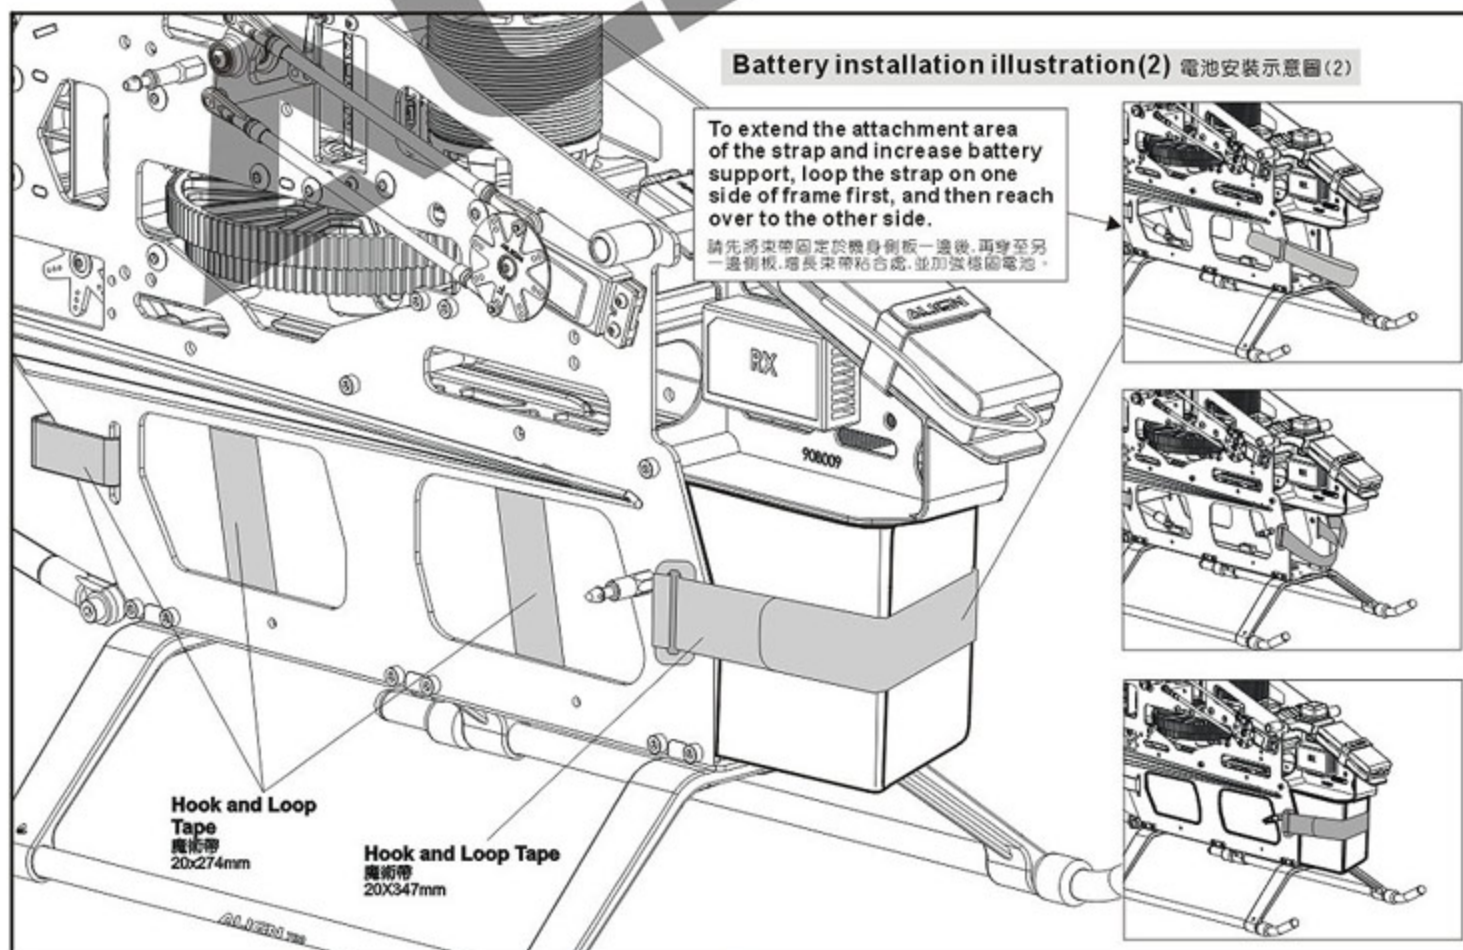

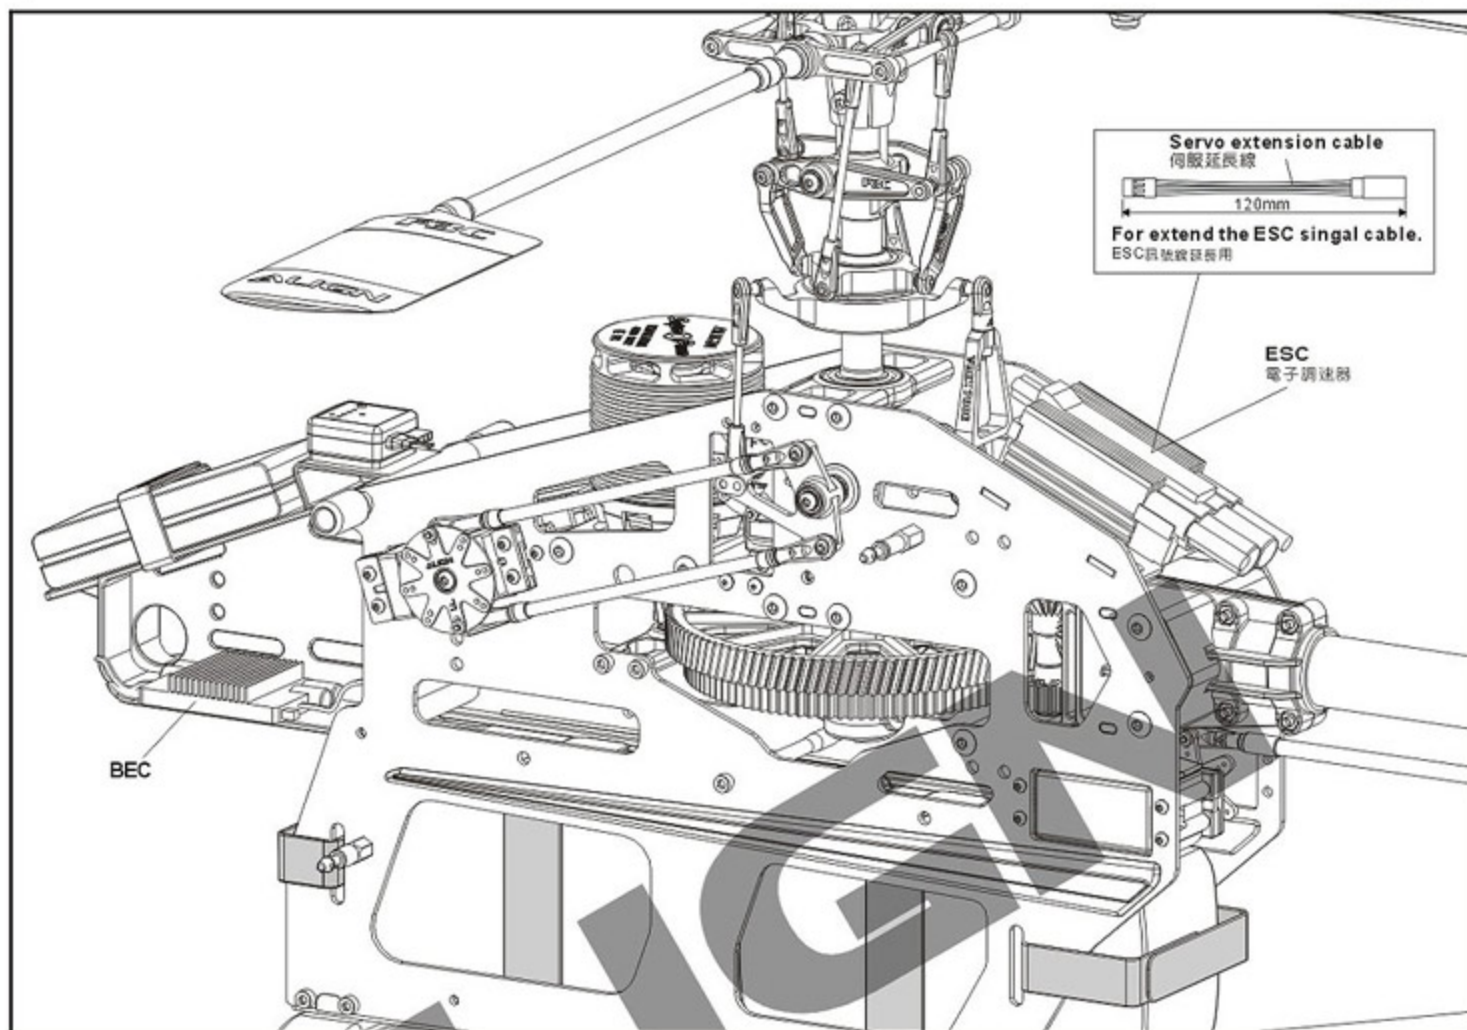


10.CANOPY ASSEMBLY 機頭罩安裝

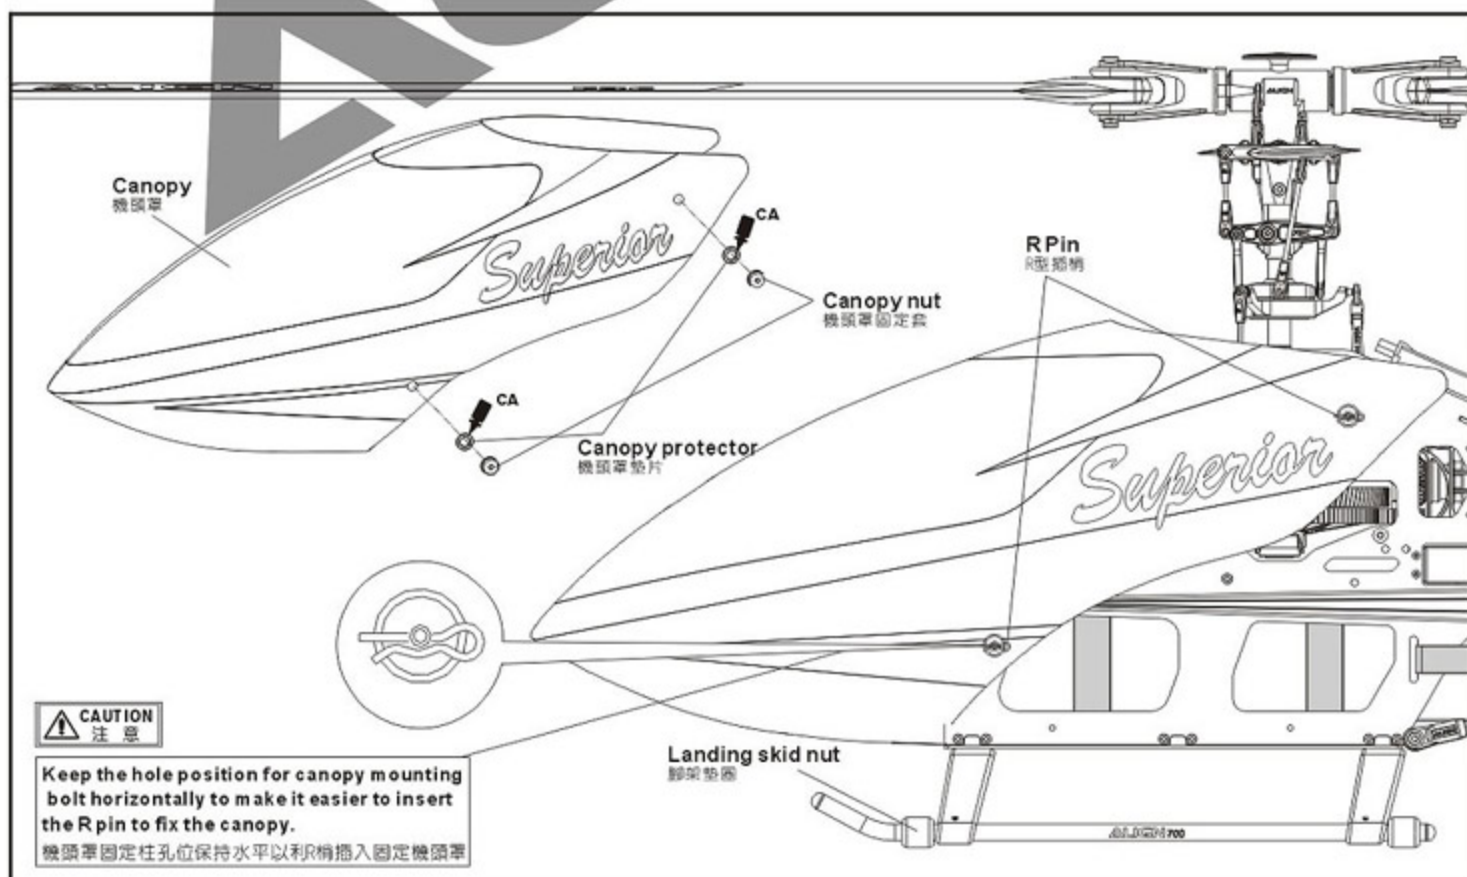

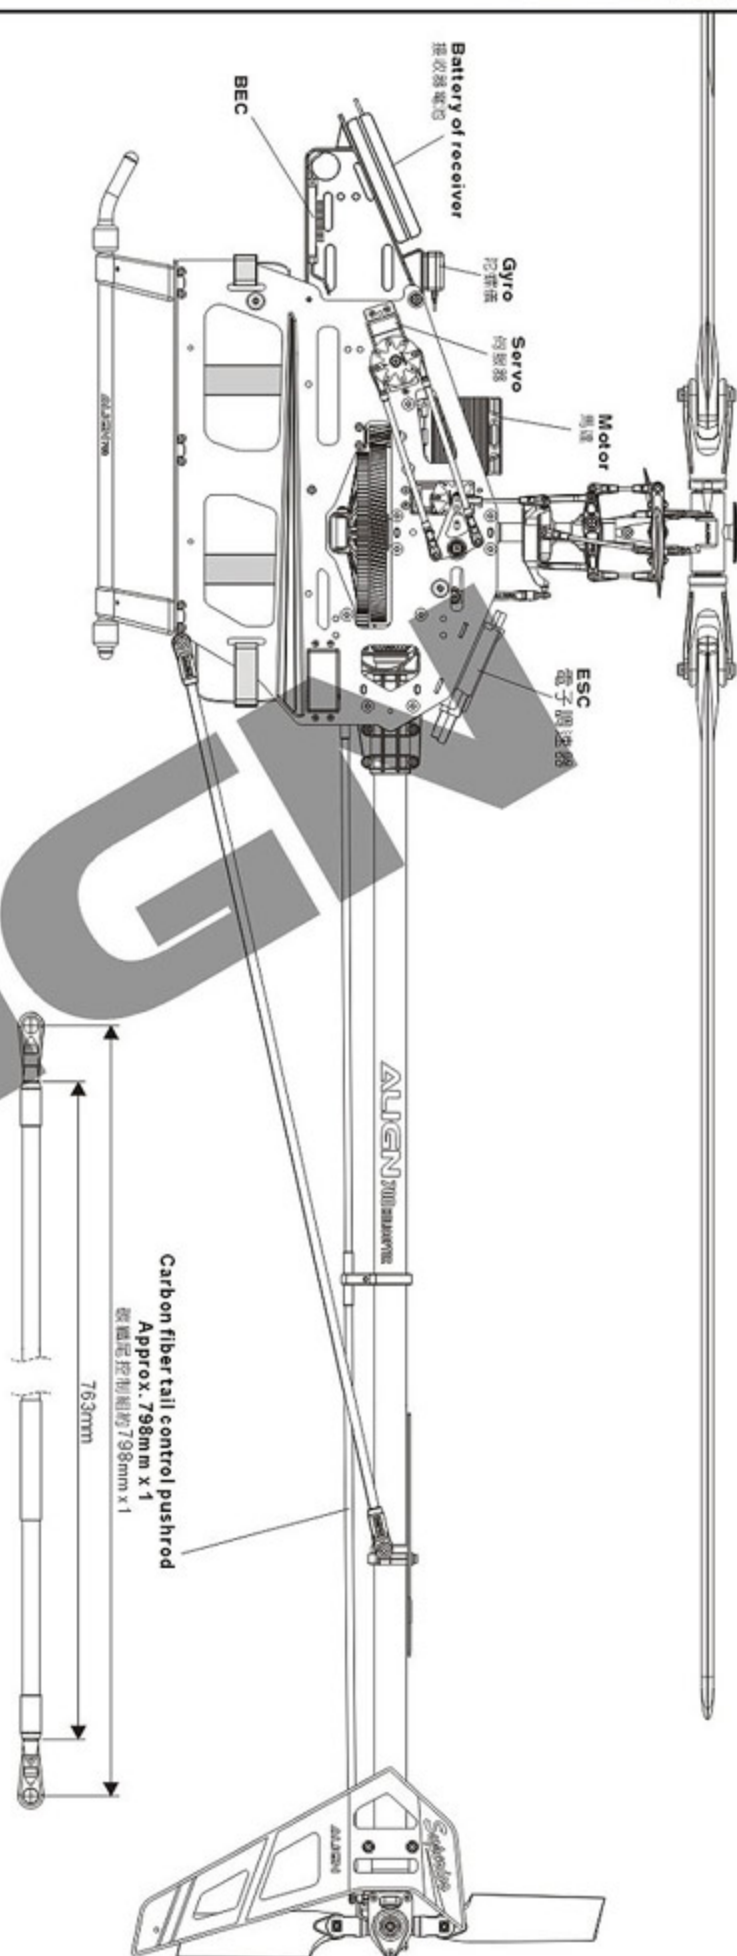


HITEC FUTABA 7CH receiver wiring
HITEC-FUTABA 7CH接收器接線示意圖

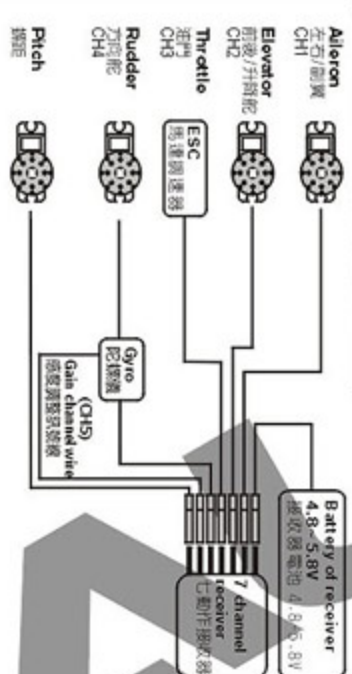

7-Channel Receiver is adequate for the requirements of the T-REX heli. You will need the following channels at a minimum: Throttle, Rudder, Elevator, Aileron, and especially Pitch(CH5) and Gyro(CH5) controls. 七通道的接收器已足夠應對T-REX直升機的基本需求，除了油门、方向舵、升降舵、副翼等基本要求外，还可以对舵机端部安装附加的陀螺仪(AUX 2)与螺距(CH5)。


JR 7CH receiver wiring
JR 7CH接收器接線示意圖

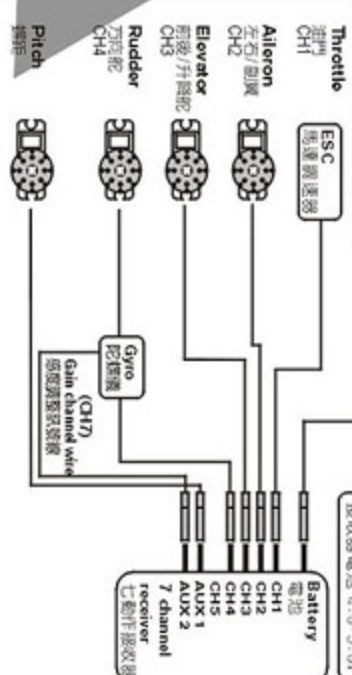

7-Channel Receiver is adequate for the requirements of the T-REX heli. You will need the following channels at a minimum: Throttle, Rudder, Elevator, Aileron, and especially Pitch(AUX 1) and Gyro(AUX 2) controls. 七通道的接收器已足夠應對T-REX直升機的基本需求，除了油门、方向舵、升降舵、副翼等基本要求外，还可以对舵机端部安装附加的陀螺仪(AUX 2)与螺距(AUX 1)。

To set this option is to turn on the transmitter and connect to BEC power.
此項設定只要開啓發射器，接上BEC電源即可進行操作。


JR Transmitter/Servo JR遙控器對應伺服器關係

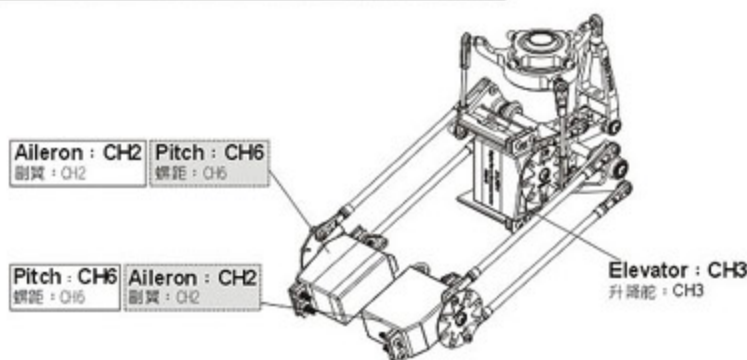

Positions of CH2 · CH6 are exchangeable. After assembling as photo (Note: Set the transmitter under CCPM 120 degrees mode), pull throttle stick (pitch) upward. If one swashplate servo (or two servos) moves downward, adjust reverse switch (REV) on the transmitter to make it move upward. If three servos move downward, adjust the travel value (+/-) of SWASH CH6 on the transmitter to make them move upward. When the actions of Aileron and Elevator are opposite, adjust travel values of SWASH CH2 and CH3.

CH2 · CH6可互換配置，依圖連結後(注意：遙控器須設定於CCPM 120°十字路模式)，將油門搖桿(Pitch)往上推，若十字路伺服器有1個或2個往下移時，請調整遙控器的反轉開關(REV)使伺服器往上，若3個伺服器同時往下移時，請調整遙控器 SWASH CH6行程量的正負值，使伺服器同時往上移，前翼與前後動作相反時，同樣調整 SWASH CH2 · CH3 行程量正負值。

FUTABA/HITEC Transmitter/Servo FUTABA/HITEC遙控器對應伺服器關係

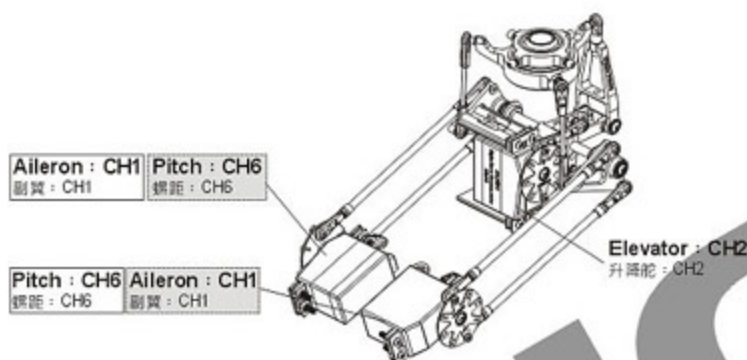

Positions of CH1 · CH6 are exchangeable. After assembling as photo (Note: Set the transmitter under CCPM 120 degrees mode), pull throttle stick (pitch) upward. If one swashplate servo (or two servos) moves downward, adjust reverse switch (REV) on the transmitter to make it move upward. If three servos move downward, adjust the travel value (+/-) of SWASH CH6 on the transmitter to make them move upward. When the actions of Aileron and Elevator are opposite, adjust travel values of SWASH CH1 and CH2.

CH1 · CH6可互換配置，依圖連結後(注意：遙控器須設定於CCPM 120°十字路模式)，將油門搖桿(Pitch)往上推，若十字路伺服器有1個或2個往下移時，請調整遙控器的反轉開關(REV)使伺服器往上，若3個伺服器同時往下移時，請調整遙控器 SWASH CH6行程量的正負值，使伺服器同時往上移，前翼與前後動作相反時，同樣調整 SWASH CH1 · CH2 行程量正負值。

13.ADJUSTMENTS FOR GYRO AND TAIL NEUTRAL SETTING 陀螺儀與尾翼中立點設定調整

Recommend to choose Head Lock type for Gyro and turn off Revolution mixing(RVMX) mode on the transmitter, then set the gain switch on the transmitter and the gyro to Head lock mode. The gain setting is about 70%, and after transmitter setting, connect to BEC power to work on tail neutral setting.

Note: When turn on BEC power, please do not touch tail rudder stick and the helicopter. Then wait for 3 seconds, make tail servo arm and tail servo at a right angle(90 degrees), tail pitch assembly must be correctly fixed about in the middle of the travel of tail rotor shaft for standard neutral setting.


陀螺儀選擇，建議選用鎖式陀螺儀，其發射器內陀螺儀設定請關閉根軸混控模式，並將發射器上的感度開關與陀螺儀切至鎖定模式，感度設約 70% 左右，發射器設定完成後接上BEC接收電源，即可進行尾中立點設置。

注意：當啓動BEC電源時請勿碰動尾舵桿或碰觸機體，待3秒陀螺儀鎖定後尾伺服器需與尾伺服器約成 90°，尾旋翼控制組須正確置於尾槳行程約中間位置，即為標準尾中立點設定。

TAIL NEUTRAL SETTING 尾中立點設定

After setting Head Lock mode, correct setting position of tail servo and tail pitch assembly is as photo. If the tail pitch assembly is not at the neutral position, please adjust the length of rudder control rod to trim.

陀螺儀鎖定後尾伺服器與尾 Pitch控制組正確位置。若尾 Pitch控制組未置於中間時請調整尾舵桿長度來修正。

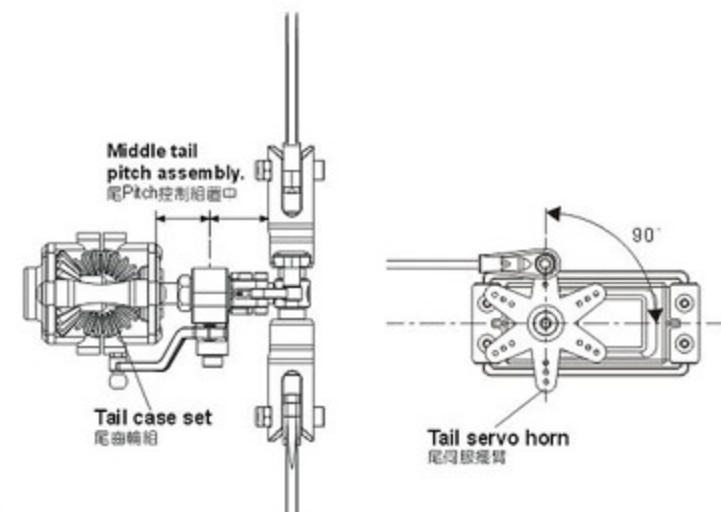


HEAD LOCK DIRECTION SETTING OF GYRO

陀螺儀鎖定方向設定

To check the head lock direction of gyro is to move the tail counterclockwise and the tail servo horn will be trimmed counterclockwise. If it trims in the reverse direction, please switch the gyro to "REVERSE".

陀螺儀鎖定方向確認，當手搖尾舵反時鐘擺動，尾伺服器應反時鐘修正，反方向時請切換陀螺儀上“鎖定反向”開關修正。

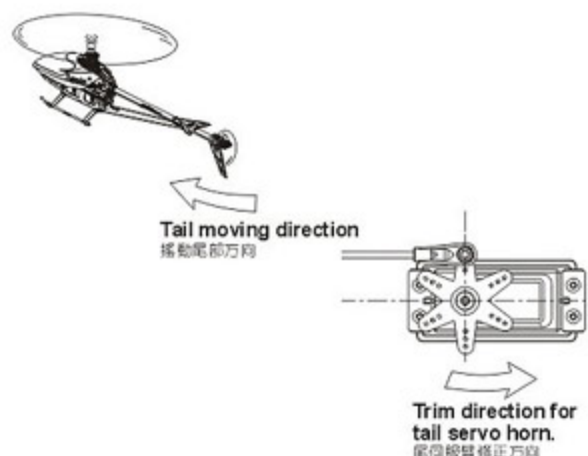

GENERAL FLIGHT 一般飛行模式



Slick position at high/Throttle 100%/Pitch +9°
搖桿高速/油門100%/Pitch+9°




Slick position at Hovering/Throttle 70%/Pitch +5.5°
搖桿停懸/油門70%/Pitch+5.5°



Slick position at low/Throttle 0%/Pitch -3.5°
搖桿低速/油門0%/Pitch-3.5°

GENERAL FLIGHT
一般飛行模式

	Throttle 油門	Pitch 螺距
5	100% High speed 100% 高速	+9°
4	85%	
3	70% Hovering 70% 停懸	+5.5°
2	45%	
1	0% Low speed 0% 低速	-3.5°

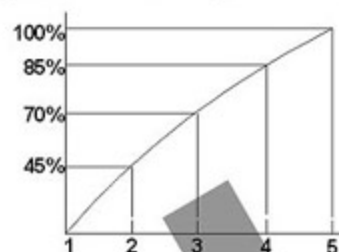


Throttle Curve (Hovering Flight)
停懸模式油門曲線


IDLE UP FLIGHT IDLE UP 飛行模式



Slick position at high/Throttle 100%/Pitch +10°
搖桿高速/油門100%/Pitch+10°

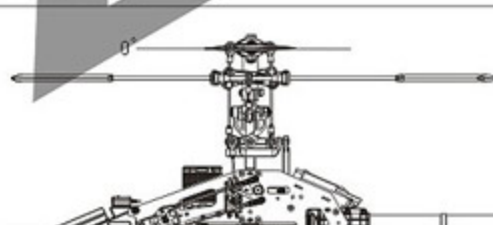


Slick position at middle/Throttle 90%/Pitch 0°
搖桿中速/油門90%/Pitch 0°

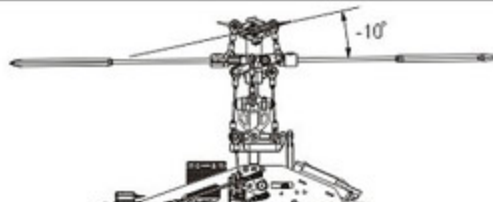

Slick position at low/Throttle 100%/Pitch -10°
搖桿低速/油門100%/Pitch-10°

IDLE UP FLIGHT

	Throttle 油門	Pitch 螺距
5	100% High 100% 高	+10°
3	90% Middle 90% 中	0°
1	100% Low 100% 低	-10°

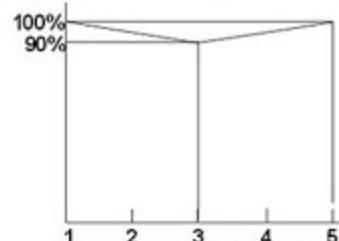

Throttle Curve (IDLE UP Flight)
IDLE UP 飛行模式油門曲線



1. Pitch range : Approx. ± 12 degrees.
2. If the pitch is set too high, it will result in shorter flight duration and poor motor performance.
3. Setting the throttle to provide a higher speed is preferable to increasing the pitch too high.

1. 螺距(Pitch)總行程約 $\pm 12^\circ$
2. 過大螺距設定，會導致動力與飛行時間降低。
3. 動力提昇以較高轉速的設定方式，優於螺距過大的設定。

- Input voltage: DC 7.4V 2cell Lithium battery
- Output voltage: DC 5.8V
- Max. Continuous Current: 6A
- Integrated power switch and voltage indicator meter
- Utilizes a linear design, resulting in no interference to the receiver.
- Including a 5A 5.1V two-way step-down Voltage Regulator
- Size: 60x34x15mm
- Weight: 31g(including wire set)


- 輸入電壓: DC 7.4V 2CELL鋰電
- 輸出電壓: DC 5.8V
- 最大連續輸出電流: 6安培
- 具電源切換開關與電壓指示燈功能
- 採線性設計，無干擾接收機的缺點
- 附5A 5.1V雙向降壓器
- 尺寸: 60x34x15mm
- 重量: 31g(含線組)

WIRING ILLUSTRATION:

Connect a 5.1V two-way step-down voltage regulator between the gyro and the rudder servo.

接線示意圖：

5.1V 雙向降壓器連接於陀螺儀與尾舵伺服器之間。

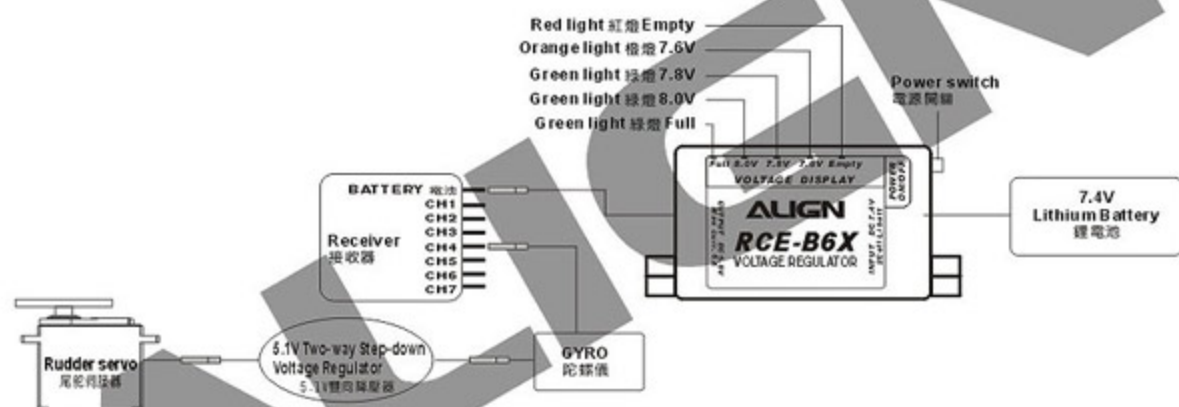**Instruction:**

1. Auto-detecting voltage meter display lights. If the entire five-light array is illuminated, the battery is fully charged. When the voltage drops below 7.6V, the three green lights will be turned off. Use caution, the battery can only be safely used for a single flight. When only the red light is on, the battery voltage is drained, and must be fully recharged before use. Do not attempt to operate the model during this condition!
 2. Some servos such as Futaba servo models 9241, 9251, 9253, 9254, 9255, 9256 and other digital servos are not capable of handling 6V. Please connect a 5.1V two-way step-down voltage regulator to avoid the servo damaged. If you are using a servo that can accept 6V input, the regulator is not required.
 3. When using a speed controller with BEC output, you must remove the red wire of BEC output on the speed controller.
 4. If the receiver does not have enough channels or an available socket, you can use a Y-type servo harness to share any channel with an existing connection.
1. 本產品具電壓指示功能，當接入充電的電池時五顆指示燈全亮，表示電池在Full電量充足狀態下；使用中當電壓降低至7.6V時(3顆綠燈熄滅)，尚可完成單趟飛行即須對電池充電或更換新電池；而如果僅亮紅燈時表示Empty電量不足，不應該再使用囉！
2. 部份的伺服器如：Futaba 9241, 9251, 9253, 9254, 9255, 9256等，此類型的伺服器不適合於較高的電壓下操作，所以使用此類型的伺服器時請另外加裝5.1V降壓器，避免伺服器損壞；規格標示准許6V輸入的伺服器則不須使用降壓器。
3. 使用具BEC輸出之調速器時，必須將調速器BEC輸出的紅色線拆除！
4. 若接收機已無多餘的電源插孔時，可利用一條伺服Y型連接線，接到接收機的任一通道，再將外接BEC與拆下的通道一同接在Y型線上。

NOTE: When fixing the wire, please do not over tighten to avoid the connector come off or the wire broken when the helicopter rotates (vibration); do not operate in rain or moisture environment to avoid the electric parts short circuit and damaged.

注意：固定線組時勿將各線組繃緊，以免直昇機運轉時因震動造成接頭鬆脫或斷線；避免在雨中或潮濕的環境下使用，以免造成零件短路而損壞。

BATTERY 電池: ALIGN Li-Poly 44.4V 5200mAh

ESC 無刷調速器: Castle ICE HV 120 Governor Mode Set RPM

Motor Pinion Gear 馬達齒輪	Main Rotor Blade 主旋翼規格	Pitch 螺距		Current(A) approx. 電流(A)大約值	Throttle Curve 油門曲線	Desired Head Speed 主旋翼轉速大約值
12T	700 F3C Carbon Fiber Blades 700 F3C碳纖主旋翼	Hover 停懸	+5°	14	Governor mode:up to 50% 定速模式50%以下	1450
		Idle UP	0°	16	Governor mode:50%~ 99% 定速模式50%~99%	1900
			±12°	54		
			0°	18	Governor mode:above 99% 定速模式99%以上	2000
			±12°	57		

NOTE: 1. Please use a pitch gauge to adjust the pitch value. Incorrect excess pitch setting will result poor helicopter performance and reduce ESC's life and battery's life.


2. For the safeties of flight and helicopter structure, please do not equip the power of main blade over 2200 RPM.

註: 1. 請務必使用螺距規來測量調整螺距, 不正確的過大螺距設定不但無法發揮直昇機的特性, 反會影響到無刷調速器與電池的壽命。

2. 為了飛行安全與機體結構安全, 主旋翼轉速設定禁止超過2200RPM。

RCM-BL700MX MOTOR RCM-BL700MX 無刷馬達

Specification 尺寸規格

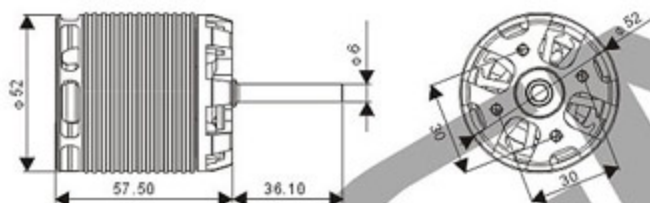

KV	KV值	470KV(RPM/V)	Input voltage	輸入電壓	DC 11.1~50.4V
Stator Arms	磁鋼片槽數	12	Magnet Poles	磁鐵極數	10
Max continuous current	最大持續電流	90A	Max instantaneous current	最大瞬間電流	150A(5sec)
Max continuous power	最大持續功率	4000W	Max instantaneous power	最大瞬間功率	6600W(5sec)
Dimension	尺寸	Shaft 6x52x57.5mm	Weight	重量	Approx. 405g

Illustration 接線示意圖



The motor rotates in different direction with different brand ESCs. If the wrong rotating direction happens, please switch any two cables to make the motor rotates in right direction.

由於各品牌電子變速器的馬達啟動轉向不盡相同, 若發生轉向錯誤時, 請將馬達與電子變速器的接線任兩條對調即可。

17.FLIGHT ADJUSTMENT AND SETTING 飛行動作調整與設定

PLEASE PRACTICE SIMULATION FLIGHT BEFORE REAL FLYING 飛行前請事先熟練模擬飛行

Do a simulation flight until you familiarize your fingers with the movements of the rudders, and keep practicing until the fingers move naturally.

1. Place the helicopter in a clear open field (Make sure the power OFF) and the tail of helicopter point to yourself.
2. Practice to operate the throttle stick (as below illustration) and repeat practicing "Throttle high/low", "Aileron left/right", "Rudder left/right", and "Elevator up/down".
3. The simulation flight practice is very important, please keep practicing until the fingers move naturally when you hear operation orders being call out.
4. Another safe and effective practice method is to use the transmitter flying on the computer through simulator software sold on the market.

在還沒瞭解直昇機各動作的操控方式前, 嚴禁通電飛行, 請先進行模擬飛行的練習, 並不斷的重複, 直到手指可熟練的控制各個動作及方向。

1. 將直昇機放在空曠的地方(確認電源為關閉), 並將直昇機的機尾對準自己。

2. 練習操作遙控器的各搖桿(各動作的操作方式如下圖), 並反覆練習油門高/低、副翼左/右、升降舵前/後及方向舵左/右操作方式。

3. 模擬飛行的練習相當重要, 請重複練習直到不需思索, 手指能自然隨著喊出的指令移動控制。

4. 另外一種最有效、最安全的練習方式, 就是透過市面販售的模擬軟體, 以遙控器在電腦上模擬飛行, 熟悉各種方向的操控。




Mode 1	Mode 2	Illustration 圖示
 Aileron 副翼		
 Elevator 升降/前後		
 Throttle 油門		
 Rudder 方向		

Flight adjustment and notice 飛行調整與注意



 - Check if the screws are firmly tightened.
- Check if the transmitter and receivers are fully charged.
- 再次確認→螺絲是否鎖緊?
- 發射器和接收器電池是否足額。



If there are other radio control aircraft at the field, make sure to check their frequencies and tell them what frequency you are using. Frequency interference can cause your model, or other models to crash and increase the risk of danger.

假使飛行場有其他遙控飛機，請確認他們的頻率，並告知他們你正在使用的頻率，相同的頻率會造成干擾導致失控和大大地增加風險。

STARTING AND STOPPING THE MOTOR 啟動和停止馬達



First check to make sure no one else is operating on the same frequency. Then place the throttle stick at lowest position and turn on the transmitter.

★ Check the movement.

★ 動作確認



ONI Step 1


First turn on the transmitter.
先開啟發射器



Check if the throttle stick is set at the lowest position.

確認油門搖桿是在最低的位置。

Mode 1 Mode 2

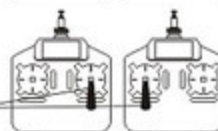

- Are the rudders moving according to the controls?
- Follow the transmitter's instruction manual to do a range test.
- 方向舵是否隨著控制方向移動?
- 根據發射器說明書進行距離測試。



ONI Step 2

Connect to the helicopter power
接上直昇機電源

OFF! Step 3

Reverse the above orders to turn off.
關閉電源時請依上述操作動作反執行。

Main rotor adjustments 主旋翼雙槳平衡調整



Tracking adjustment is very dangerous, so please keep away from the helicopter at a distance of at least 10m.

調整軌跡非常危險，請於距離飛機最少10公尺的距離。

- Before adjusting, apply a red piece of tape on one blade, or paint a red stripe with a marker or paint to identify on blade.
- Raise the throttle stick slowly and stop just before the helicopter lifts-off ground. Look at the spinning blades from the side of the helicopter.
- Look at the path of the rotor carefully. If the two blades rotate in the same path, it does not need to adjustment. If one blade is higher or lower than the other blade, adjust the tracking immediately.

 
1. 調整前先在其中一支主旋翼的翼端，貼上有顏色的貼紙或畫上顏色記號，方便雙槳調整辨識。

2. 慢慢的推起油門搖桿到起飛點並且停止，在飛機離地面前，從飛機側邊觀察主旋翼轉動。

3. 仔細觀察旋翼軌跡(假如兩支旋翼移動都是相同軌跡，則不需要調整;可是如果一支旋翼較高或較低產生“雙槳”的情形時，則必須立刻調整軌跡)。

- A. When rotating, the blade with higher path means the pitch too big. linkage rod (C) for slight pitch trim.
- B. When rotating, the blade with lower path means the pitch too small. linkage rod (C) for slight pitch trim.

- A. 旋翼轉動時較高軌跡的主旋翼表示螺距 (PITCH) 過大，請調短連桿 (C) 修正。
- B. 旋翼轉動時較低軌跡的主旋翼表示螺距 (PITCH) 過小，請調長連桿 (C) 修正。




Incorrect tracking may cause vibrations. Please repeat adjusting the tracking to make sure the rotor is correctly aligned. After tracking adjustment, please check the pitch angle is approx. 5° when hovering.

不正確的旋翼軌跡會導致震動，請不斷重複調整軌跡，使旋翼軌跡精準正確。在調整軌跡後，確認一下 Pitch 角度在停旋時應為大約 5°。



FLIGHT ADJUSTMENT AND NOTICE FOR BEGINNERS 初學飛行調整與注意

 - During the operation of the helicopter, please stand approximately 10m diagonally behind the helicopter.
- 飛行時，請站在直昇機後方最少 10 公尺。





- Make sure that no one or obstructions in the vicinity.
- For flying safety, please carefully check if every movement and directions are correct when hovering.
- 確認鄰近地區沒有人和障礙物。
- 為了飛行安全，您必須先確認停懸時各項操縱動作是否正確。



Do not attempt until you have some experiences with the operation of helicopter.

嚴禁無熟練操縱飛行經驗者操縱飛行。


STEP 1 THROTTLE CONTROL PRACTICE 油門控制練習

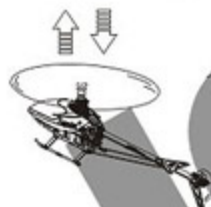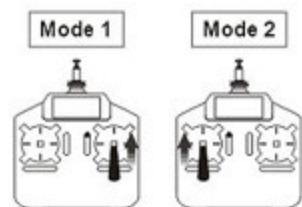

- When the helicopter begins to lift-off the ground, slowly reduce the throttle to bring the helicopter back down. Keep practicing this action until you control the throttle smoothly.



當直昇機開始離地時，慢慢降低油門將飛機降下。持續練習飛機從地面上升和下降直到你覺得油門控制很

STEP 2 AILERON AND ELEVATOR CONTROL PRACTICE 副翼和升降控制練習

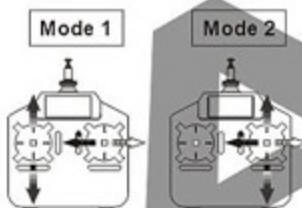

1. Raise the throttle stick slowly.
2. Move the helicopter in any direction back, forward, left and right, slowly move the aileron and elevator sticks in the opposite direction to fly back to its original position.

 1. 慢慢升起油門搖桿。
2. 使直昇機依指示：移動向後/向前/向左/向右，慢慢反向移動副翼和升降搖桿並將直昇機開回到原來位置。

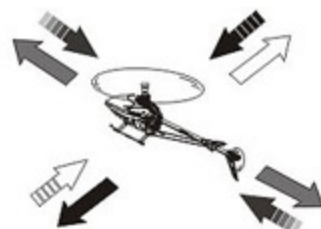


- If the nose of the helicopter moves, please lower the throttle stick and land the helicopter. Then move your position diagonally behind the helicopter 10m and continue practicing.
- If the helicopter flies too far away from you, please land the helicopter and move your position behind 10m and continue practicing.
- 當直昇機機頭偏移時，請降低油門並降落，然後移動自己的位置到直昇機的正後方 10 公尺再繼續練習。
- 假如直昇機飛離你太遠，請先降落直昇機，並到直昇機後 10 公尺再繼續練習。

STEP 3 RUDDER CONTROL PRACTICING 方向舵操作練習

1. Slowly raise the throttle stick.
2. Move the nose of the helicopter to right or left, and then slowly move the rudder stick in the opposite direction to fly back to its original position.

1. 慢慢升起油門搖桿。
2. 將直昇機機頭移動左或右，然後慢慢反向移動方向舵搖桿並將直昇機飛回原本位置。

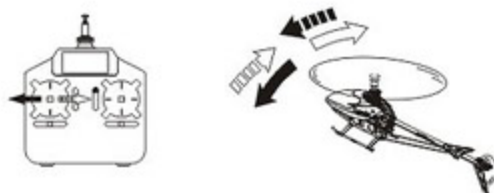

STEP 4

After you are familiar with all actions from Step 1 to 3, draw a circle on the ground and practice within the circle to increase your accuracy.

當你覺得 step 1-3 動作熟悉了，在地上畫圓圈並在這個圓圈的範圍內練習飛行，以增加你操控的準確度。


- You can draw a smaller circle when you get more familiar with the actions.
- 當你更加習慣操作動作，你可以畫更小的圓圈。



STEP 5 DIRECTION CHANGE AND HOVERING PRACTICE 改變直昇機方向和練習停旋

After you are familiar with Step1 to 4, stand at side of the helicopter and continue practicing Step1 to 4. Then repeat the Step1 to 4 by standing in front of the helicopter.

當你覺得step1-4動作熟悉後，站在面對直昇機側邊並繼續練習step1-4。之後，站在直昇機機頭前方重複步驟練習。

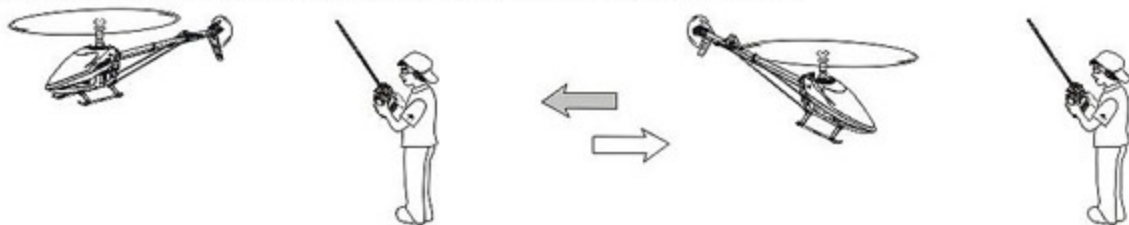

ADJUSTMENT OF EACH TRIM 飛行動作微調


Slowly raise the throttle stick and just as the helicopter lift-off the ground, you can use the trim to correct the action if the helicopter leans in a different direction.

慢慢升起油門搖桿，當直昇機剛剛離開地面時，若直昇機傾向不同方向，可使用微調修正動作。

1. Adjustment of elevator trim 調整升降舵微調

Just before the helicopter lift-off, the nose lean forward/backward...
When leans forward, adjust the trim down.
When leans backward, adjust the trim up.

在直昇機正要起飛時，機頭朝前/後方向偏移...
向前偏移時，微調向下調整。
向後偏移時，微調向上調整。

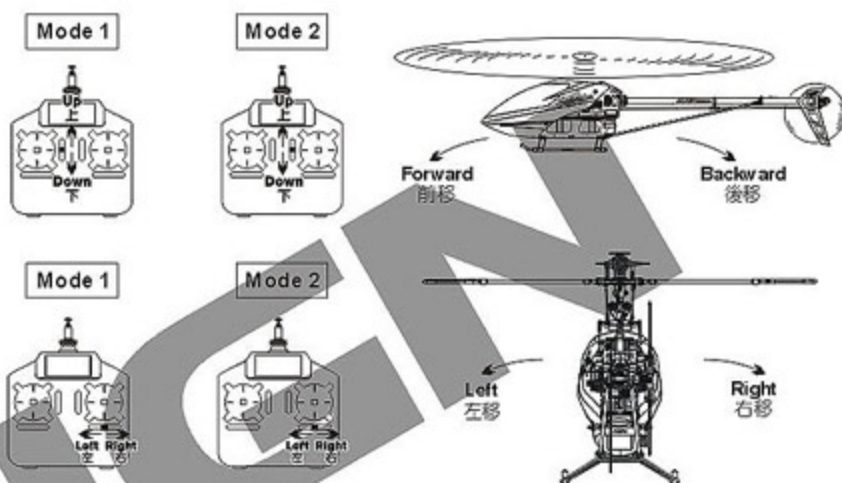

2. Adjustment of Aileron trim 調整副翼微調

Just before the helicopter lift-off, the body lean left/right...
When leans right, adjust the trim to left side.
When leans left, adjust the trim to right side.

在直昇機正要起飛時，機身朝左/右方向偏移...
向右偏移時，微調向左調整。
向左偏移時，微調向右調整。

TROUBLE SHOOTING DURING FLIGHT 如何排除飛行中的狀況

	Situation 狀況	Cause 原因	Way to deal 對策
Blade Tracking 雙槳平衡	Out of tracking 雙槳	Adjustment of pitch rod has not been done. PITCH連桿長度調整不平均	Adjust the length of linkage rod (C) 調整連桿 (C) 長度
During Hovering 停懸	Low rotation of the rotor 主旋翼轉速偏低	★ Pitch of main blade is high. ★ 主旋翼的PITCH偏高 ★ Throttle curve is too low during hovering. ★ 停懸點油門曲線過低	★ Lower the pitch about 4~5 during hovering (The rotation should be about 1700~1800rpm during hovering). ★ 調低Pitch停懸Pitch約4~5 (停懸時主旋翼需為約1450~1500RPM) ★ Heighten the throttle curve during hovering. ★ 調高停懸點油門曲線
	High rotation of the rotor 主旋翼轉速偏高	★ Pitch of main blade is low. ★ 主旋翼的PITCH偏低 ★ Throttle curve is too high during hovering. ★ 停懸點油門曲線過高	★ Adjust the pitch rod (C) (The rotation should be about 1700~1800rpm during hovering). ★ 調整連桿 (C) (停懸時主旋翼需為約1450~1500RPM) ★ Lower the throttle curve during hovering. ★ 調低停懸點油門曲線
Sensitivity of the gyro 陀螺儀敏感度	The tail leans to one side during hovering, or when trim the rudder and return to the neutral, the tail lags and cannot stay in a control position. 停懸時尾翼向某一邊偏移，或撥動方向舵並回復到中立點時，尾翼產生延遲，無法停頓在所控制位置上。	★ Failure setting of tail neutral point. ★ 尾中立點設定不當 ★ The sensitivity of the gyro is low. ★ 陀螺儀敏感度偏低	★ Reset tail neutral point. ★ 重設尾中立點 ★ Increase the sensitivity. ★ 增加敏感度
	The tail wags left and right during flight at hovering or full speed. 停懸或全油門時尾翼左右來回快速搖擺。	The sensitivity of the gyro is high. 陀螺儀敏感度偏高	Decrease the sensitivity. 降低敏感度

※ If the problem is still there even after tried above, stop flying and contact with your seller.

※ 在做完以上調整後，仍然無法改善情況時，應立即停止飛行並連絡您的經銷商。

ALIGN

Specifications & Equipment/規格配備:

Length/機身長: 1343mm

Height/機身高: 424mm

Main Blade Length/主旋翼長: 700mm

Main Rotor Diameter/主旋翼直徑: 1582mm

Tail Rotor Diameter/尾旋翼直徑: 281mm

Motor Drive Gear/馬達齒輪: 12T

Main Drive Gear/主齒輪: 112T

Autorotation Tail Drive Gear/尾驅動主齒: 104T

Drive Gear Ratio/齒輪傳動比: 9.33: 1: 4.33

Weight(With Motor)/空機重(含馬達): 3230g

Flying Weight/全配重: Approx. 5200g

